


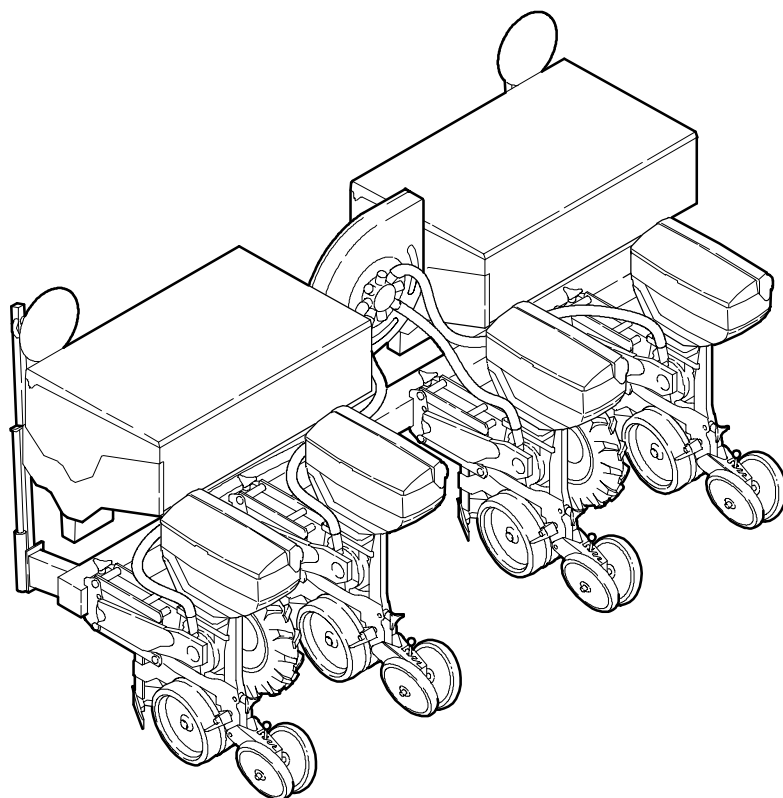

CATALOGO RICAMBI
FUTURA /MAXI V.3

GUARANTEE CONDITION

- a) **We recognize to our customers/dealers a 12 month warranty for defective materials on our production machines from delivery date.**

In case of non-immediate sale of the machine, the customer/dealer can delay the starting of the warranty period, and make it start from the actual moment of the sale by means of a written communication to MASCAR (fax 0444-583831) containing the customer/user generalities and the actual delivery date of the machine.

(P.S.: In order to make this operation easier, MASCAR is going to adopt warranty coupons to be filled in and sent back to MASCAR for this purpose).

- b) **During the warranty period, the parts that will be recognized as defective will be free supplied by MASCAR.**

- c) **The transport and handworking costs are at the customer's/user's charge.**

This choice is justified by the following reasons:

1. The customer/dealer who has chosen MASCAR must dispose of a minimum spare part stock. In order to support the creation of this spare part stock, MASCAR allows every year, according to the quantity, an extra 10-20% discount on the normally granted discount on spare part orders passed in November and December.
 2. Moreover all spare parts bought with these forms, can be substituted with others within 18 months from despatch. Sure that at the basis of a serious and uptodate country there must be a trustful and correct relation with its customers. MASCAR usually recognizes without objection the warranty requests presented, and proceeds with the prompt despatch of the requested pieces. Of course, MASCAR reserves the right to examine the parts on which the warranty has been claimed, and to revoke it in case the warranty conditions are not present.
 3. MASCAR is now adopting a spare part promotion policy by maintaining the prices extremely low, as demonstrated by the considerable price reductions practiced in the last few months on over 80% of the article numbers contained in the list.
- a) **For accountancy reasons, all spare parts are invoiced at delivery; after the warranty recognition, credit note will be issued.**

Moreover, it is important to point out that the customer/dealer has to preserve the defective part in his own business until:

- He has the opportunity to send them to MASCAR;
- MASCAR has the possibility of collecting them;
- MASCAR asks the despatch of the parts at his own charge.

After this examination, MASCAR will effect:

- Credit note for the confirmed warranty
- Payment request for non recognized warranty.

MASCAR SPA

Sede e Stabilimento:

36040 GRUMOLO DELLE ABBADESSE (VI)

ITALY- Via Roma, 82

Tel.0444/380180 Fax 0444/583831-380185

ORDER ☐QUOTATION ☐***SPARE PART REQUEST FORM***

TABLE	CATALOGUE N.	ARTICLE REF.	DESCRIPTION	Q.ty


Date:

P. IVA / VAT-N.:


Messrs:
Address:

Please despatch by:

STAMP AND SIGNATURE

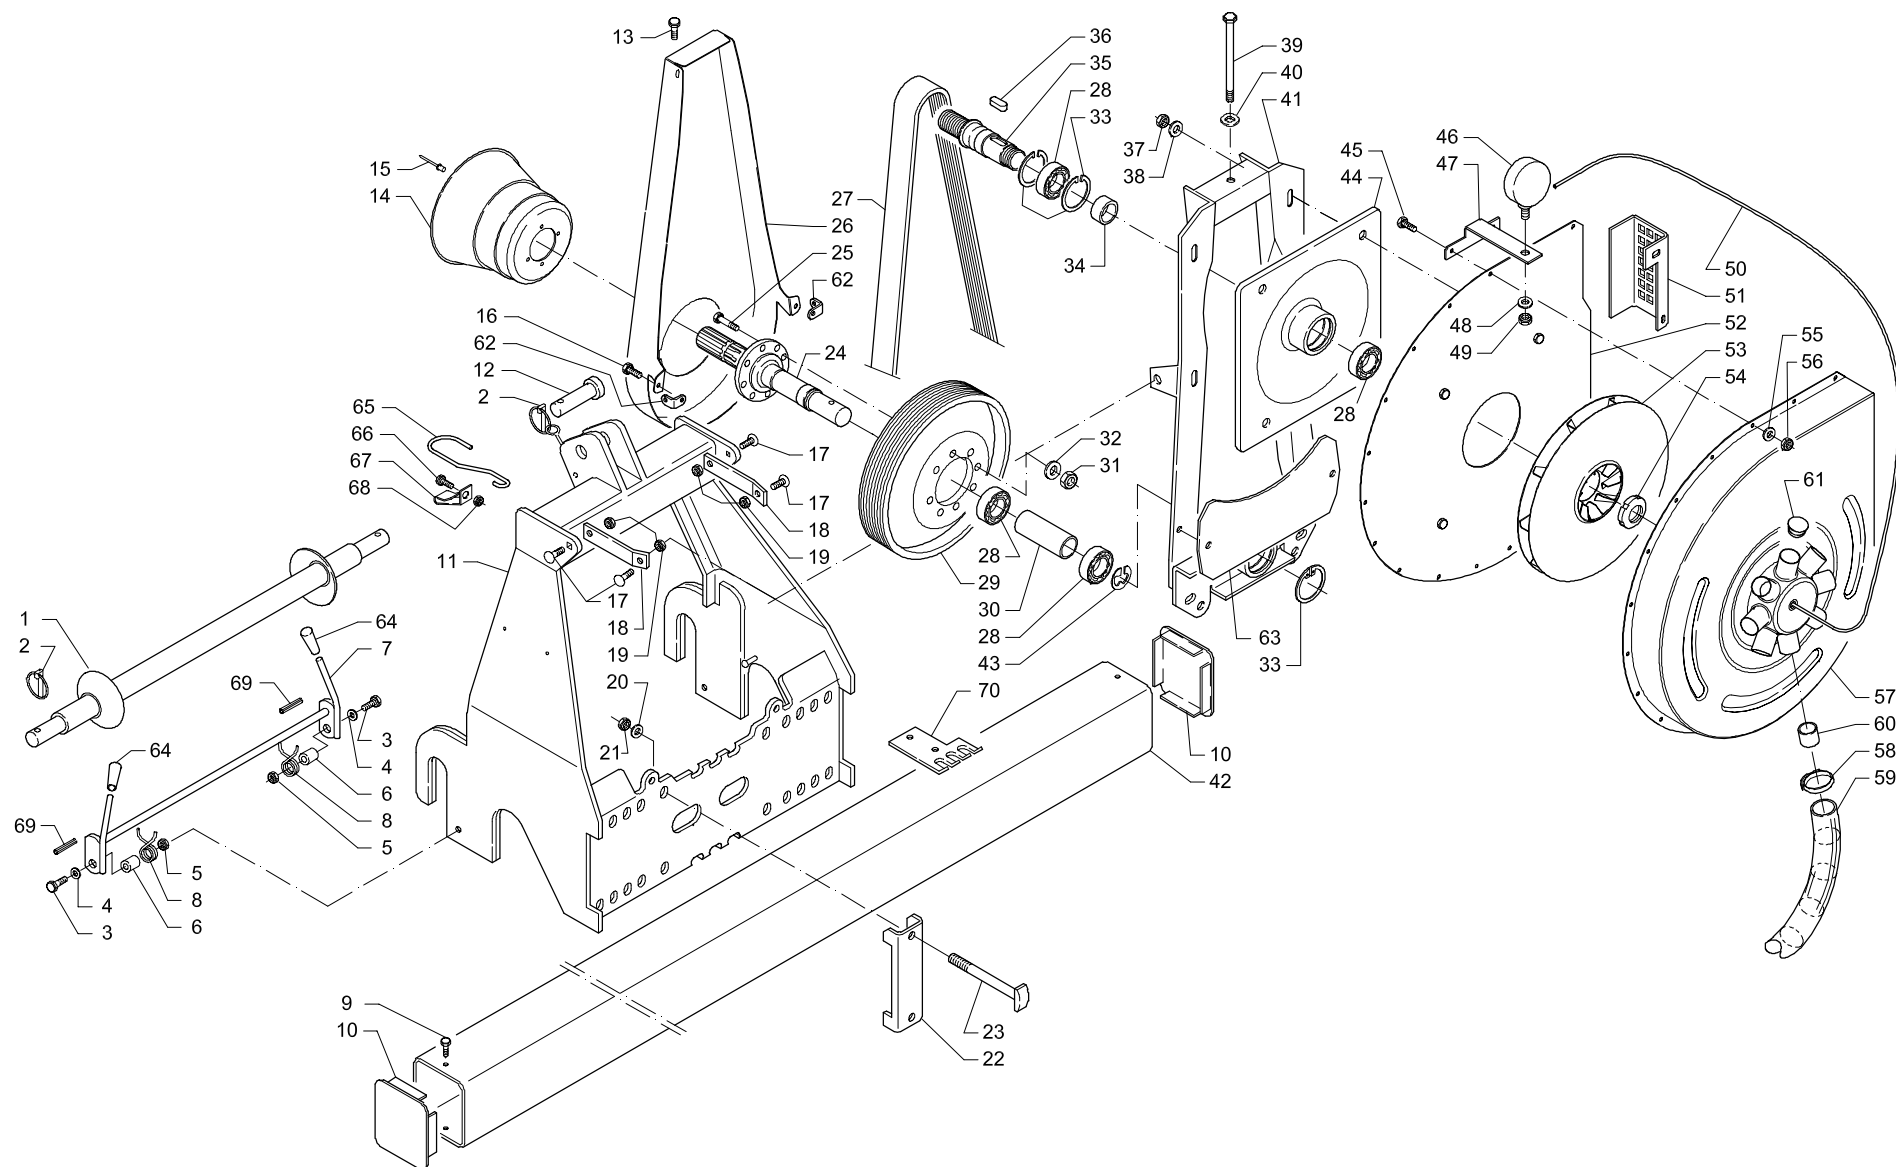


POSITION CODE DENOMINATION			POSITION CODE DENOMINATION		
1	10030315	LINKAGE 1 st AND 2 nd POINT	42	10000118	PIPE FRAME 1800
2	024.011	PLUG AT CLUTCH D.10 B=60 ZG	42	10000125	PIPE FRAME 2500
3	020.157	SCREW TE M12X 55 8.8 5737 ZB	42	10000128	PIPE FRAME 2800
4	023.040	FLAT WASHER M12=13 X24X2,5 6592	42	10000130	PIPE FRAME 3000
5	021.113	SELF LOCKING NUT M 12 7473 ZB	42	10000132	PIPE FRAME 3250
6	10030319	BUSHING CLICK ZB	42	10000135	PIPE FRAME 3500
7	10030311	CLOSING LEVER 1st and 2nd PTO	42	10000140	PIPE FRAME 4000
8	10030318	SPRING CLICK ZB	42	10000142	PIPE FRAME 4200
9	020.810	SELF LOCKING SCREW D.6,3X 35 6950 ZB	42	10000155	PIPE FRAME 5500
10	095.075	PLUG FOR PIPE Q.150X150 S.5-8 POL.BLACK	43	028.110	SEEGER RING E D. 30 7435/471
11	10030300	THIRD POINT 2nd CAT.	44	10023330	PLATE SUPPORT FAN
12	10000350	PIN THIRD POINT L=113 ZB	45	020.011	SCREW TE M 6X 16 8.8 5739 ZB
13	020.510	SCREW TCEI M 6X 12 8.8 5931	46	080.015	LITTLE VACUOMETER A TYPE (DN 63)
14	095.017	PROTECTION PTO SHAFT	47	10003350	VACUOMETER SUPPORT ZB
15	029.002	ALLUMINIUM RIVET D 4X15	48	023.045	FLAT WASHER M16=17 X30X3 6592
16	020.013	SCREW TE M 6X 25 8.8 5739 ZB	49	021.007	NUT E 6S M 16 5588
17	020.602	SCREW TTQST M 8X 30 4.6 5731 ZB	50	10003360	VACUOMETER PIPE
18	10033112	PLATE OF LINKAGE TURBINE	51	10003365	PROTECTION
19	021.114	SELF LOCKING NUT M 8 7473 ZB	52	10003310	COVER TURBINE
20	023.612	FLAT WASHER M16=15 X40X5 D6340	53	10003320	FAN
21	021.123	SELF LOCKING NUT M 16 7473 ZB	54	021.246	SELF LOCKING METAL RING .M25X1,5 GUK ZG
22	10017102	FRONT LINKAGE	55	023.010	FLAT WASHER M 6= 6,3X12X1,6 6592
23	10030330	SCREW TE M16X220 12.9	56	021.115	SELF LOCKING NUT M 6 7473 ZB
24	10023220	SAHFT POWER TAKE OFF	57	10003315	COVER FUN 8 WAYS
25	020.011	SCREW TE M 6X 16 8.8 5739 ZB	58	025.612	BAND S. 32 - 50 3017 (SX 9C)
26	10033115	PROTECTION CARTER	59	083.601	FAN PIPE WITH SPIRAL PVC DI.40
27	031.032	BELT POLY-V 575 J 16 1461	60	10003405	SPACERS PIPES
28	050.111	BEARING 6306-2RS C3	61	030.760	PLASTIC PLUG D.33 (PER TURBINA)
29	10023230	DRIVING PULLEY D.288 X 42 (540)	62	10023118	PLATE
30	10023221	SPACER PTO SHAFT	63	10033120	CARTER
31	021.115	SELF LOCKING NUT M 6 7473 ZB	64	095.250	PLUG 12
32	023.010	FALT WASHER M 6= 6,3X12X1,6 6593	65	10040401	LINKAGE SHAFT
33	028.022	SEEGER RING I D. 72 7437/472	66	020.051	SCREW TE M 8X 20 8.8 5739 ZB
34	10023345	SPACER TURNING SHAFT 38X16,5 ZB	67	10040402	BLADE LINKAGE
35	10023340	TURNING SHAFT	68	021.114	SELF LOCKING NUT M 8 7473 ZB
36	027.199	WASHER 8X 7X 25 6604/A	69	024.395	ELASTIC PLUG D 10X60 6873 NE
37	021.120	SELF LOCKING NUT M 14 7473 ZB	70	10040400	SUPPORT PIPES THIRD POINT
38	023.610	FLAT WASHER M14=15 X40X5 D6340			
39	020.125	SCREW TE M10X130 8.8 5737 ZB			
40	023.035	FLAT WASHER M14=15 X28X2,5 6592			
41	10033101	TURBINE SUPPORT			

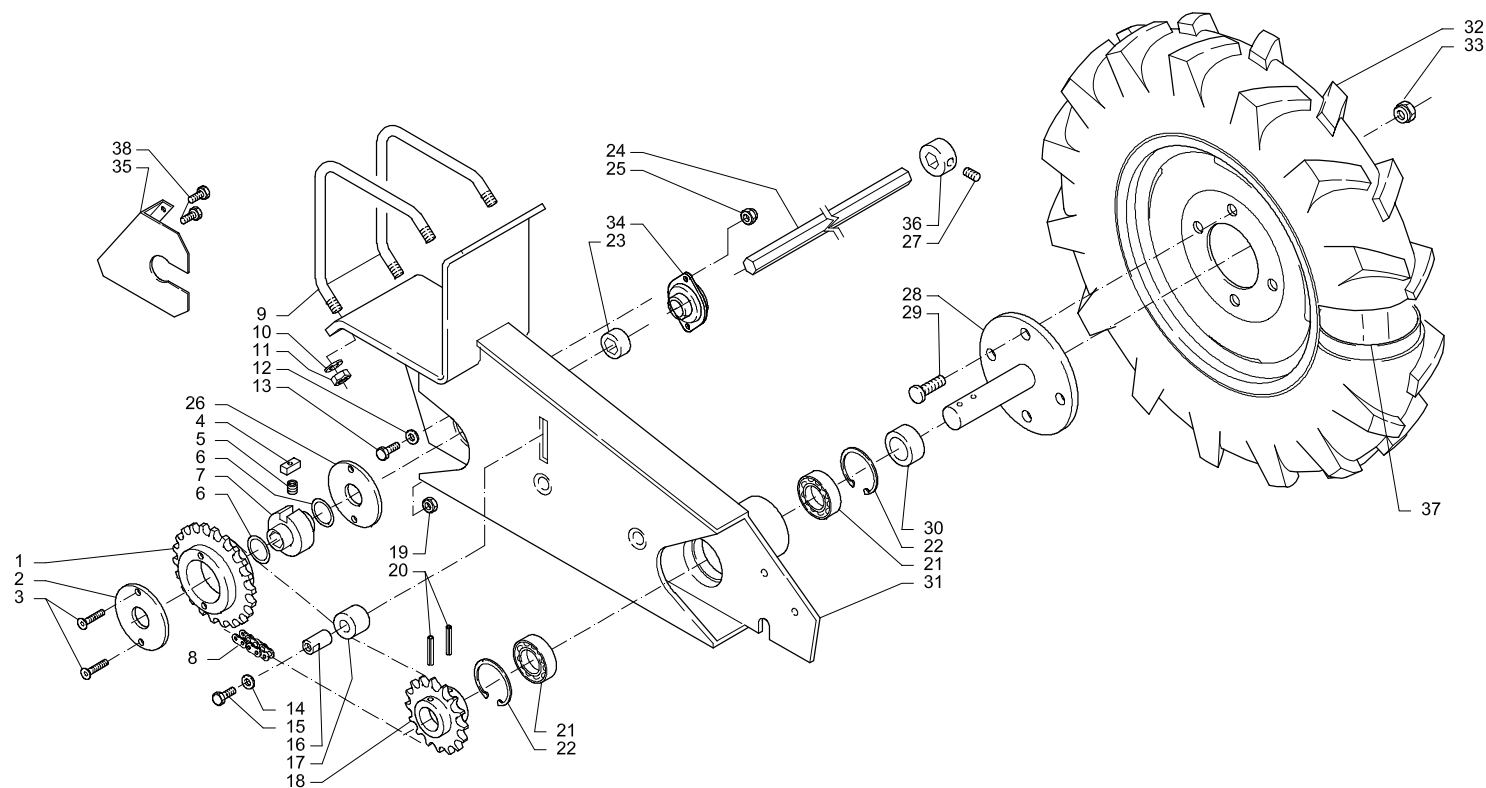

2 RIGHT AND LEFT TRANSMISSION WHEELS


POSITION CODE			DENOMINATION	POSITION	CODE	DENOMINATION
1	10022944	PINION WHEEL Z=22		31	10022864	RIGHT WHEEL
2	10022936	OUTER SIDE CLUTCH		31	10022865	LEFT WHEEL
3	020.640	SCREW TSPEI M5X30 10.9 5933 ZB		32	10022898	RIGHT WHEEL 5.00-15
4	10022946	WHEEL CLUTCH		32	10022899	LEFT WHEEL 5.00-15
5	10022932	SPRING ZBD		32	10022897	RIGHT WHEEL 6.50-15
6	046.027	RING OR 0280 DI=28 FILO 1.5		32	10022900	LEFT WHEEL 6.50-15
7	10022926	HEXAGONAL HUB ZB		33	021.241	NUT WHEEL AXLE MB 16X1,5
8	10022892	WHEEL CHAIN 5/8"X3/8" 67P+M.G.		34	051.101	SUPPORT AT FLANGE IN IRON SHEET PFL205 Z
9	10002240	U-BOLT AT "V"M14 TUBO 160 ZB		35	10022902	RIGHT CARTER
10	023.035	FLAT WASHER M14=15 X28X2.5 6592		35	10022901	LEFT CARTER
11	021.120	SELF LOCKING NUT M14 7473 ZB		36	10002750	BUSHING LOCKING GEAR BAR
12	023.020	FLAT WASHER M8		37	031199	TYRE 5.00-15 4PR
13	021.601	SCREW TTQST M8X25 4.6 5731 ZB		38	020.050	SCREW TE M8X16 8.8 5739
14	023.030	FLAT WASHER M10=10,5X20X2 6592 ZB				
15	020.101	SCREW TE M10X 25 8.8 5739 ZB				
16	10022894	THIGHTENING CHAIN SHAFT ZB				
17	10022896	SLIDING TIGHTENING CHAIN (PA 66)				
18	10022890	PINION Z=16				
19	021.102	SELF LOCKING NUT M 8 7474 ZB				
20	024.346	ELASTIC PLUG D6X50 6873				
21	08520044	CAM SLIDING SMALL WHEEL (LR201NPPU)				
22	028.015	SEEGER RING I D62 7437/472				
23	10002704	HEXAGONAL BUSHING				
24	10002318	HEXAGON TRANSMISSION 1800 ZB				
24	10002320	HEXAGON TRANSMISSION 2000 ZB				
24	10002325	HEXAGON TRANSMISSION 2500 ZB				
24	10002332	HEXAGON TRANSMISSION 3250 ZB				
24	10002335	HEXAGON TRANSMISSION 3500 ZB				
24	10002340	HEXAGON TRANSMISSION 4000 ZB				
24	10002342	HEXAGON TRANSMISSION 4200 ZB				
24	10002345	HEXAGON TRANSMISSION 4500 ZB				
24	10002355	HEXAGON TRANSMISSION 5500 ZB				
25	021.102	SELF LOCKING NUT M8 7474				
26	10022938	INNER SIDE CLUTCH ZB				
27	020.025	SCREW TE M8X20 8.8 5739 ZB				
28	10022880	WHEEL AXLE				
29	020.238	SCREW TE M16X35 8.8 5739				
30	10022888	SPACER ZB				

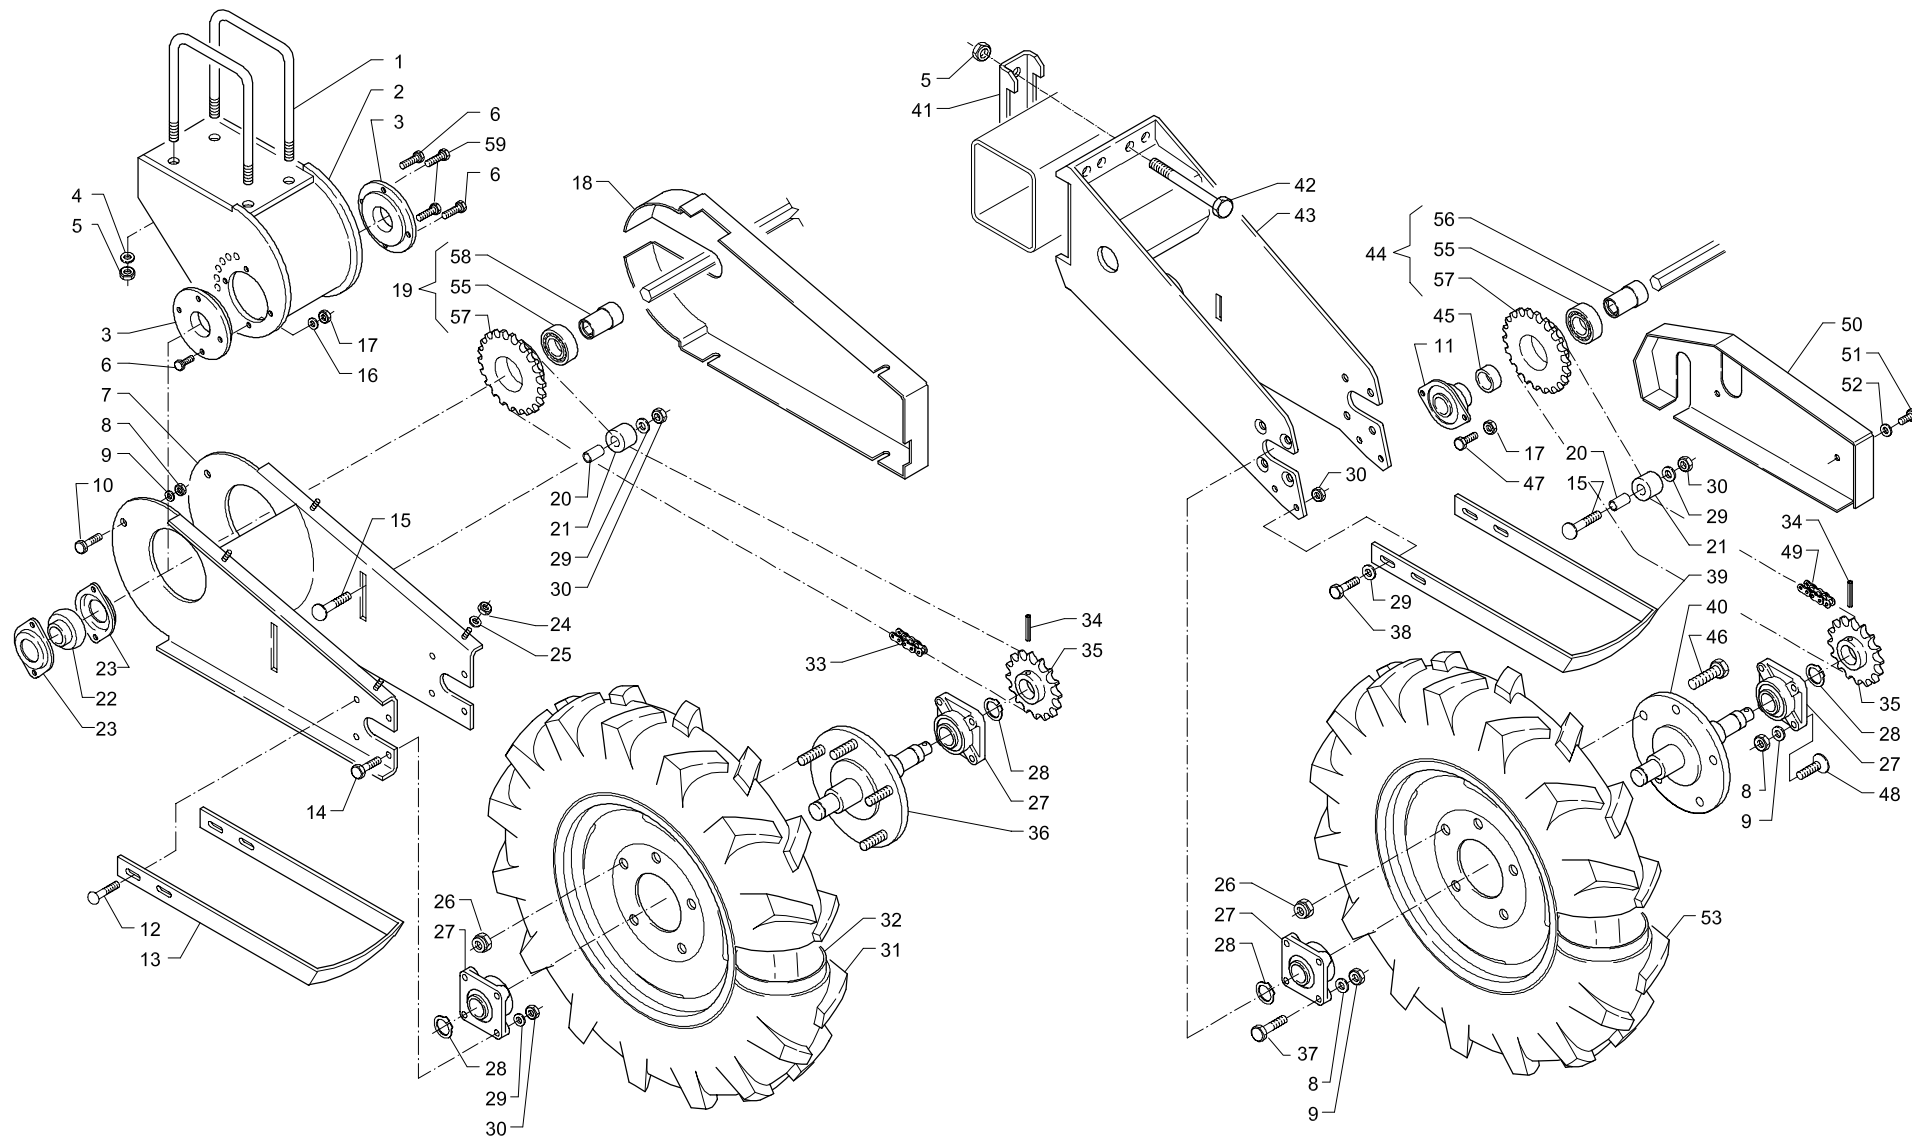

283.007/01

3 ADJUSTABLE TRANSMISSION WHEEL 6.50-80-15


POSITION CODE			DENOMINATION			POSITION CODE			DENOMINATION		
1	10000250		U-BOLT M14 ZB			41	10017102		FRONT LINKAGE		
2	10002420		ADJUSTABLE HARM			42	020.217		SCREW TE M14X210 8.8 5737		
3	10002430		FLANGE ZB			43	10022810		RIGHT WHEEL SUPPORT		
4	023.035		FLAT WASHER M14=15 X28X2,5 6592			44	10022280		PINION RIGHT FREE WHEEL		
5	021.120		SELF LOCKING NUT M 14 7473			45	10022850		SPACER		
6	020.054		SCREW TE M 8X 35			46	020.238		SCREW TE M16X 35 8.8 5740		
7	10012410		WHEEL SUPPORT			47	020.628		SCREW TSPEI M 8X 25 10.9 5933		
8	021.104		SELF LOCKING NUT M 12 7474 ZB			48	020.636		SCREW TSPEI M12X 40 10.9 5933		
9	023.040		FLAT WASHER M12=13 X24X2,5 6592			49	10022830		CHAIN 5/8"X 3/8" 69 LINKS + M.G.		
10	020.153		SCREW TE M12X 35			50	10022832		CARTER RIGHT WHEEL		
11	051.101		SUPPORT AT FLANGE IN IRON SHEET PFL205			51	020.011		SCREW TE M 6X 16 8.8 5739 ZB		
12	020.607		SCREW TTQST M10X 40 4.6 5731			52	023.010		FLAT WASHER M 6= 6,3X12X1,6		
13	10002611		PROTECTION			53	040.315		WHEEL 6,50-80-15 5 PUNTI		
14	020.104		SCREW TE M10X 40 8.8 5739			54	020.055		SCREW TE M 8X 40 8.8 5739		
15	020.594		SCREW TTQST M10X 55 4.6 5731			55	050.037		BEARING FREE WHEEL CSK 2RS 30X62X21		
16	023.020		FLAT WASHER M 8= 8,4X16X1,6 6592			56	10022618		FIXING BUSHING FREE WHEEL		
17	021.114		SELF LOCKING NUT M 8 7473 ZB			57	10032617		PINION 5/8"X 3/8" Z=22 ZB		
18	10012440		CARTER SUPPORT ADJUSTABLE WHEEL			58	10022619		FIXING BUSHING FREE WHEEL FOR WHEEL		
19	10022284		PINION RIGHT FREE WHEEL								
20	10002609		SPACER ZB								
21	10002610		ROLL (NYLON)								
22			BEARING FOR SUPPORT PFL205								
23	10002460		SUPPORT								
24	021.115		SELF LOCKING NUT M 6 7473 ZB								
25	023.010		FLAT WASHER M 6= 6,3X12X1,6 6592								
26	021.241		NUT AXLE WHEEL MB 16X1,5								
27	051.070		SUPPORT UCF 205								
28	028.108		SEEGER RING E D. 25 7435/471								
29	023.030		FLAT WASHER M10=10,5X20X2 6592								
30	021.112		SELF LOCKING NUT M 10 7473 ZB								
31	040.310		WHEEL 5.00-15 4PR TS06 MITAS DX 12CM								
32	031199		TYRE								
33	10012295		TRANSMISSION CHAIN 75 M. 5/8"X 3/8"								
34	024.344		ELASTIC PLUG D. 6X30 6873 NE								
35	10002608		PINION Z=16								
36	10002614		WHEEL HUB								
37	020.149		SCREW TE M12X 40 8.8 5739								
38	020.102		SCREW TE M10X 30 8.8 5739 ZB								
39	10022840		SCRAPER								
40	10022820		WHEEL AXLE 6,5-80-15								

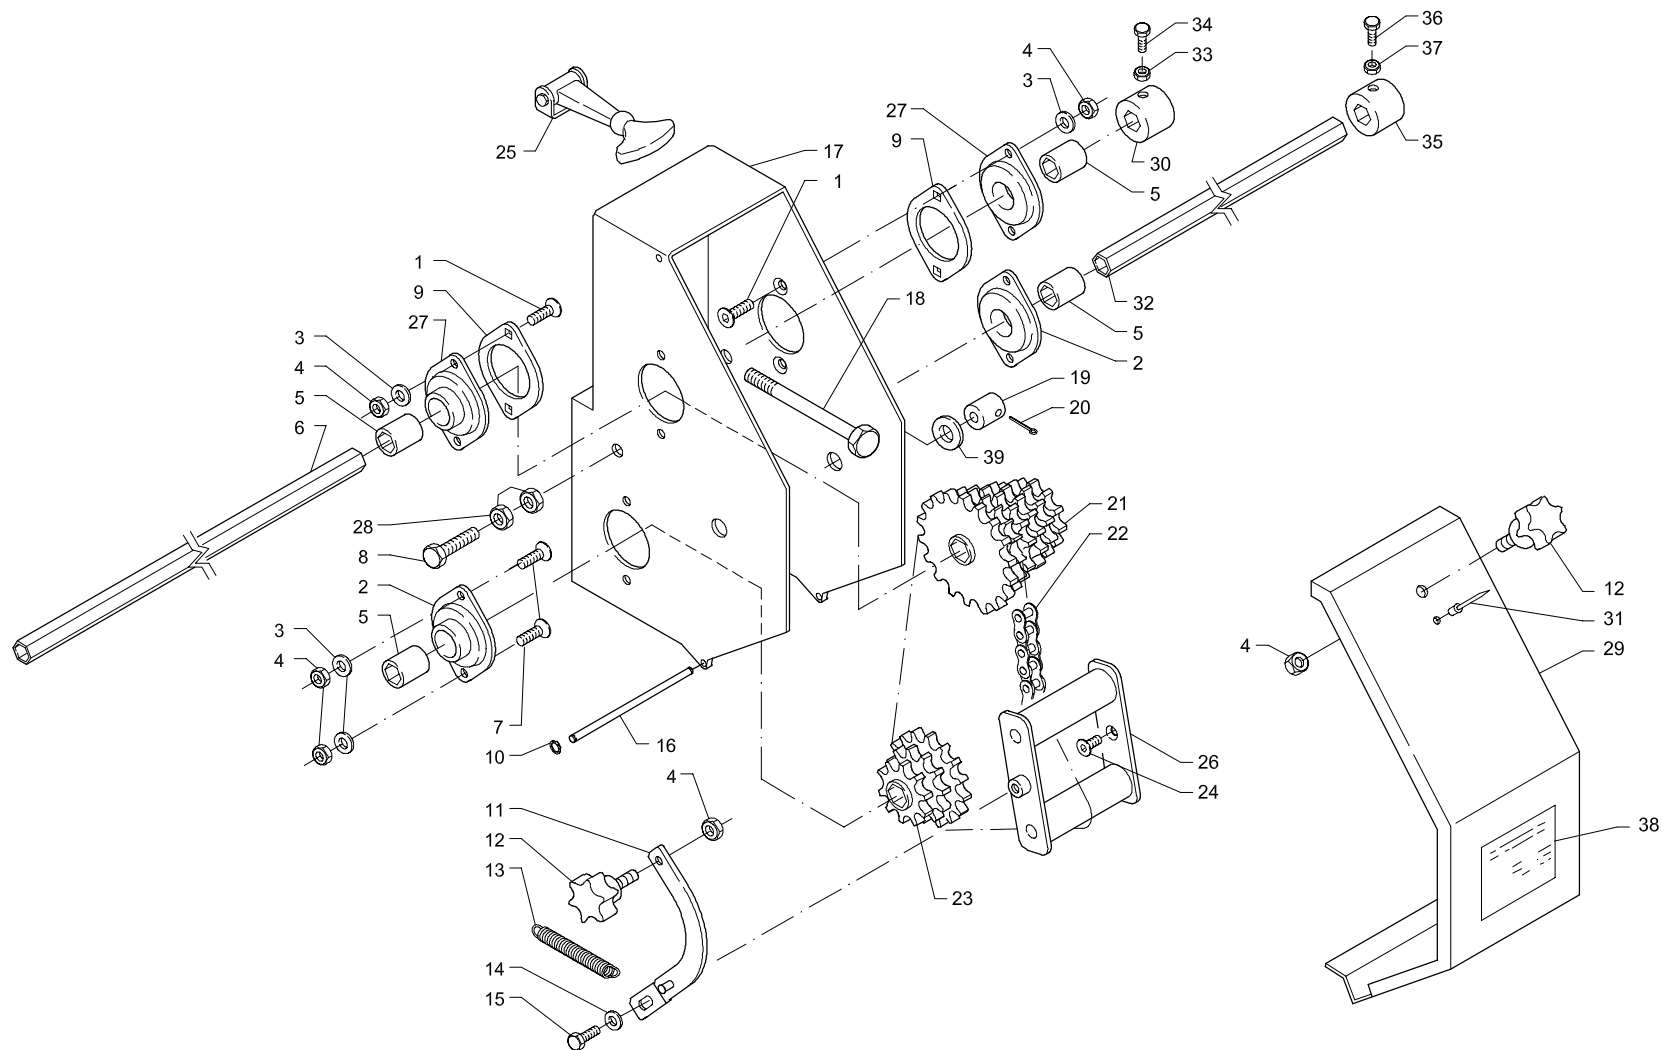

283.007/01

4 GEAR


POSITION	CODE	DENOMINATION	POSITION	CODE	DENOMINATION
1	020.628	SCREW TSPEI M 8X 25 10.9 5933 ZB	32	10002332	HEXAGON TRANSMISSION 3250 ZB
2	051.101	SUPPORT AT FLANGE IN IRON SHEET PFL205	32	10002335	HEXAGON TRANSMISSION 3500 ZB
3	023.020	FLAT WASHER M 8= 8,4X16X1,6 6592	32	10002340	HEXAGON TRANSMISSION 4000 ZB
4	021.114	SELF LOCKING NUT M 8 7473 ZB	32	10002342	HEXAGON TRANSMISSION 4200 ZB
5	10002704	HEGAON BUSHING	32	10002355	HEXAGON TRANSMISSION 5500 ZB
6	10022400	HEXAGONAL PIPE L=1350 ZB	33	021.004	NUT E 6S M 10 5588 ZB
6	10022402	HEXAGONAL PIPE L=1790 ZB	34	020.098	SCREW TE M10X 16 8.8 5739 ZB
6	10022322	HEXAGONAL PIPE L=2500	35	10002750	LOCK GEAR BAR ZB
6	10022406	HEXAGONAL PIPE L=3190 ZB	36	020.051	SCREW TE M 8X 20 8.8 5739 ZB
6	10022408	HEXAGONAL PIPE L=3240 ZB	37	021.003	NUT E 6S M 8 5588 ZB
6	10022410	HEXAGONAL PIPE L=3490 ZB	38	10039840	LABEL SOWING TABLE FUTURA WHEEL 5,00X15
6	10022412	HEXAGONAL PIPE L=3990 ZB	38	10039845	LABEL SOWING TABLE WHEEL 6,5X15
6	10022414	HEXAGONAL PIPE L=4190 ZB	39	023.045	FLAT WASHER M16=17 X30X3 6592
6	10022416	HEXAGONAL PIPE L=5490 ZB			
7	020.646	SCREW TSPEI M 8X 18 10.9 5933			
8	020.122	SCREW TE M10X 65 8.8 5737 ZB			
9	10022735	SUPPORT FLANGE			
10	023.756	SHAFT WASHER D. 6			
11	10002720	TIGHTENING CHAIN LEVER			
12	095.001	MALE HAND WHEEL M 8X15 TECNOPOLIM			
13	10001912	COVER SEED SPRING ZB			
14	023.010	FLAT WASHER M 6= 6,3X12X1,6 6592			
15	020.010	SCREW TE M 6X 10 8.8 5739 ZB			
16	10012726	HINGE SHAFT			
17	10012731	BOX			
18	020.217	SCREW TE M14X210 8.8 5737			
19	10002701	MOBILE PIN ZB			
20	024.227	SPLIT PIN D. 4 X 30 ZB 1336			
21	10022707	BUSHING WITH 6 PINIONS			
22	10002718	CHAIN 5/8"X3/8" 49 LINKS + JUNCTION *			
23	10002714	BUSHING WITH 3 PINIONS			
24	020.656	SCREW TSPEI M 6X 12 10.9 5933 NE			
25	095.095	COMPLETE TIE-ROD IN RUBBER			
26	10002760	TIGHTENING CHAIN GEAR			
27	051.100	SUPPORT 205 KRRB AH02 - PFL205			
28	021.004	NUT E 6S M 10 5588 ZB			
29	10012724	BOX COVER			
30	10022310	LOCK SIDE SLIDING			
31	023.829	RIVET ALL. 3.8X12-4X12			
32	10002325	HEXAGON TRANSMISSION 2500 ZB			
32	10002331	HEXAGON TRANSMISSION 3190 ZB			

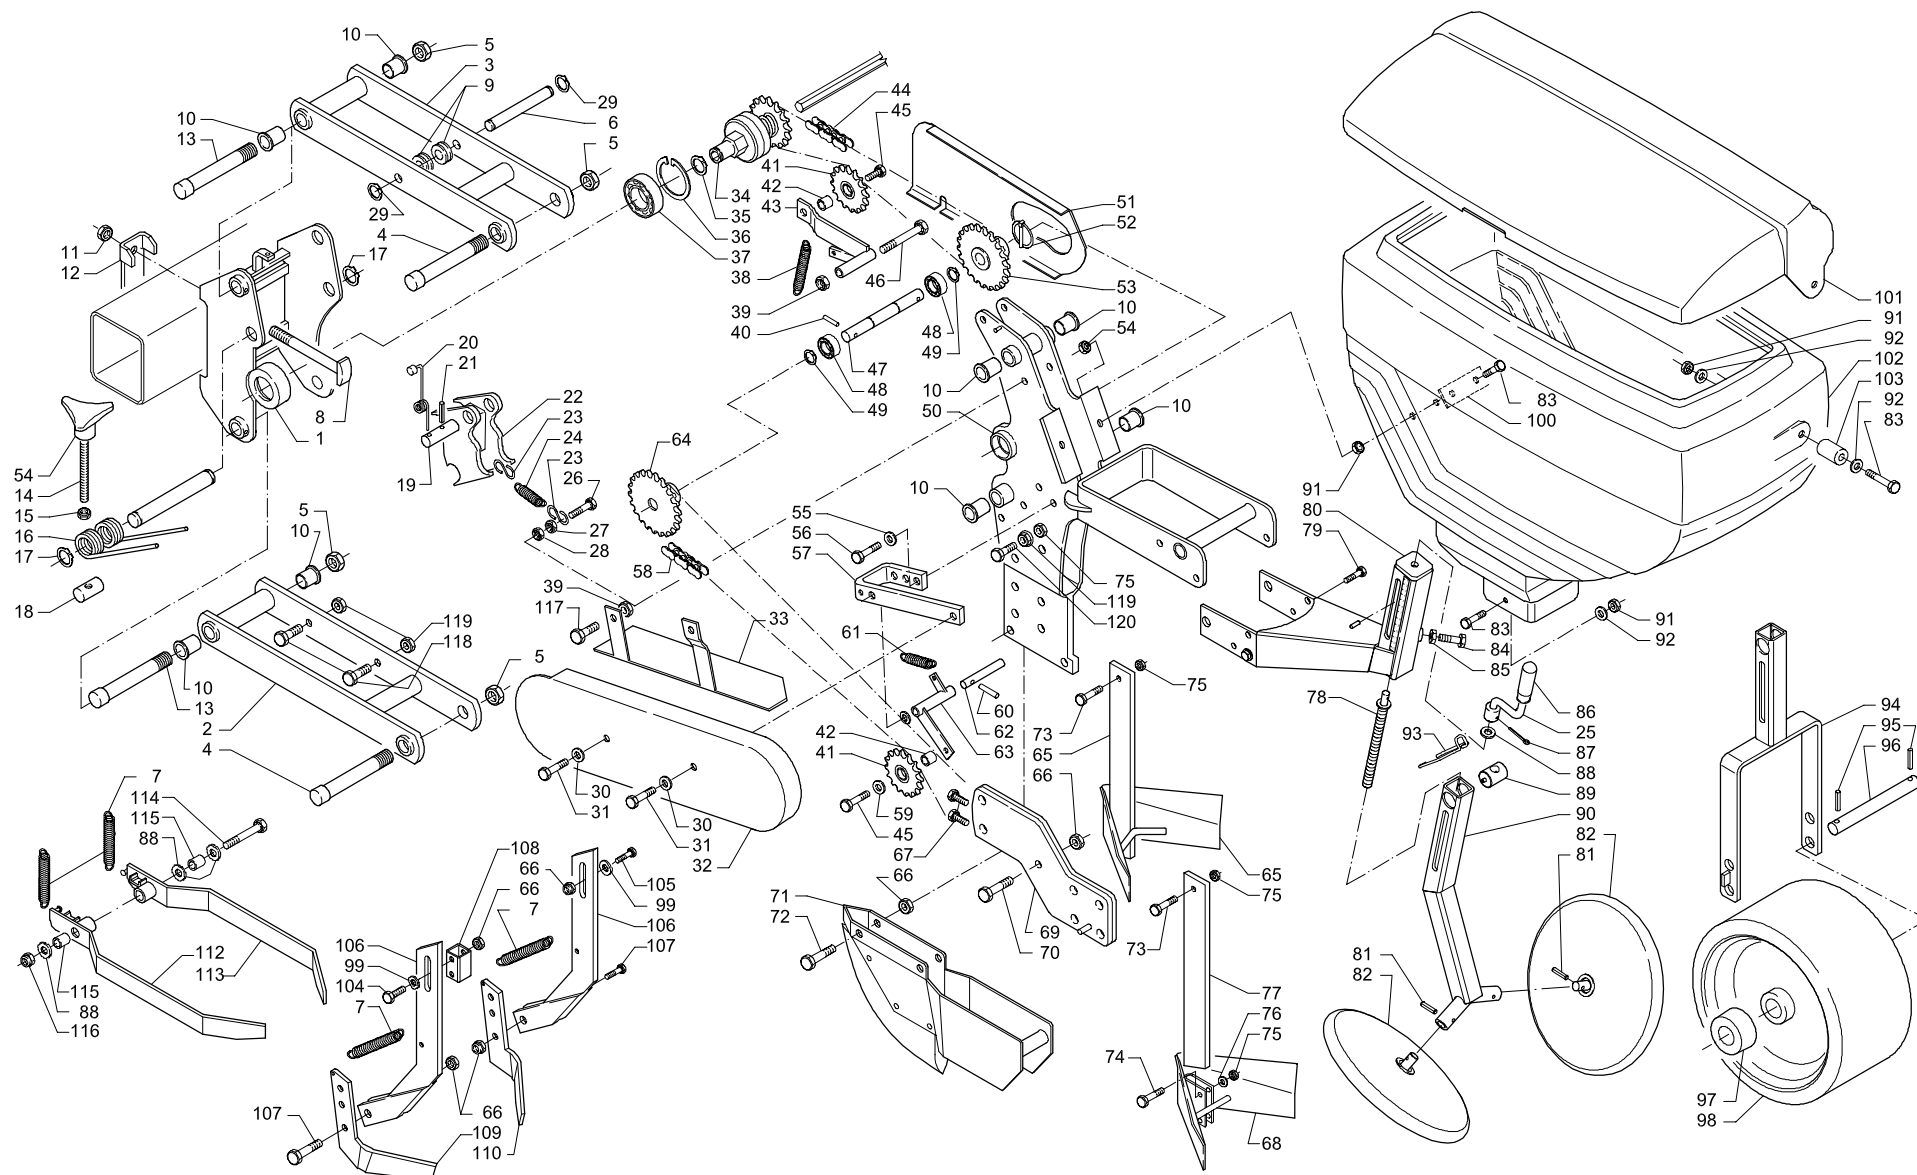

283.007/01

5 ESOWING ELEMENT FUTURA


POSITION	CODE	DENOMINATION	POSITION	CODE	DENOMINATION
1	10021020	PARALLEOGRAM LINKAGE	40	024.327	ELASTIC PLUG D. 5X32 6873 NE
2	10001031	LOWER PARALLELOGRAM	41	033.020	PINION THIGHTENING CHAIN Z11 1/2" X 5/16" ZB
3	10001030	UPPER PARALLELOGRAM	42	10011425	BUSHING FOR TIGHTENING CHAIN ZB
4	10011110	REAR PIN PARALLELOGRAM ZB	43	10001420	TIGHTENING CHAIN ZB
5	021.125	SELF LOCKING NUT M 18 7473 ZB	44	10001185	CHAIN 08B-1 1/2 5/16 69 LINKS +G.+F.
6	10001075	PIN DRIVING SPRING	45	020.013	SCREW TE M 6X 25 8.8 5739 ZB
7	10001912	COVER SEED SPRING ZB	46	020.127	SCREW TE M10X 70 8.8 5737 ZB
8	10011025	SCREW M14 (DACR.320A)	47	10001242	SHAFT RELEASE PINION (AISI 304)
9	10001070	DRIVING SPRING	48	050.101	BEARING 6003-2RS1
10	10001009	BUSHING	49	028.102	SEEGER RING E D. 17 7435/471
11	021.120	SELF LOCKING NUT M 14 7473 ZB	50	10021500	ELEMENT SUPPORT (FUTURA)
12	10017102	FRONT LINKAGE	51	10001511	CARTER
13	10011050	FRONT PIN PARALLELOGRAM ZB	52	024.015	CLUTCH PLUG D. 6 B=48 ZG
14	10021077	BAR M10X150 ZB	53	10001244	PINION RELASE Z=20 1/2" X 5/16" ZB
15	10001055	SPRING ELEMENT ZB	54	095.007	HAND-WHEEL THREE POINTS
16	021.004	NUT E 6S M 10 5588 ZB	55	023.301	WASHER GROWER A M 8-D. 8,4 1751
17	028.108	SEEGER RING E D. 25 7435/471	56	020.051	SCREW TE M 8X 20 8.8 5739 ZB
18	10001063	DRIVING TIE-ROD SPRING ZB	57	10011409	STIRRUP FOR CARTER ZB
19	10021414	PIN AUTOMATIC LINKAGE ZB	58	10001180	CHAIN 08B-1 1/2 5/16 77 MAGLIE +G.+F.
20	10001413	CHOOK SPRING	59	023.006	FLAT WASHER M 6= 6,6X24X2 6593
21	024.304	ELASTIC PLUG D. 4X20 6873 NE	60	024.304	ELASTIC PLUG D. 4X20 6873 NE
22	10021401	HOOK ELEMENT	61	10001912	SPRING COVER SEED ZB
23	022.250	ESSE DIAM. 3,5 GALVANISED	62	10011419	PIN TIGHTENING CHAIN ZB
24	054.001	TORSION SPRING 0,5X5X29 ZINCATA	63	10011415	TIGHTENING CHAIN CARTER SIDE
25	10001705	FORK	64	10001404	PINION
26	020.006	SCREW TE M 6X 40 8.8 5737 ZB	65	10001607	SHARE
27	021.101	SELF LOCKING NUT M 6 7474 ZB	66	021.112	SELF LOCKING NUT M 10 7473 ZB
28	021.505	NUT E FLANG.ZIGRINATO M 6 D.6923	67	020.100	SCREW TE M10X 20 8.8 5739 ZB
29	028.098	SEEGER RING E D. 12 7435/471	68	10001660	ADJUSTABLE SHARE
30	023.010	FLAT WASHER M 6= 6,3X12X1,6 6592	69	10021606	SUPPORT SHARE
31	020.011	SCREW TE M 6X 16 8.8 5739	70	020.115	SCREW TE M10X 40 8.8 5737 ZB
32	10001509	CARTER	71	10001810	SUFFOLK COULTER MAISE
33	10001515	PROTECTION CHAIN ELEMENT	71	10001860	SUFFOLK COULTER FOR MEXICO
34	10021200	FRICTION LOCK	72	020.129	SCREW TE M10X 35 8.8 5737
35	028.110	SEEGER RING E D. 30	73	020.012	SCREW TE M 6X 20 8.8 5739
36	028.010	SEEGER RING I D. 55 7437/472	74	020.014	SCREW TE M 6X 30 8.8 5739 ZB
37	050.002	BEARING 6006-2RS	75	021.101	SELF LOCKING NUT M 6 7474 ZB
38	10007248	TIGHTENING CHAIN SPRING ZB	76	023.300	WASHER GROWER A M 6-D. 6,4 1751
39	021.112	SELF LOCKING NUT M 10 7473 ZB	77	10001655	KNIFE VE

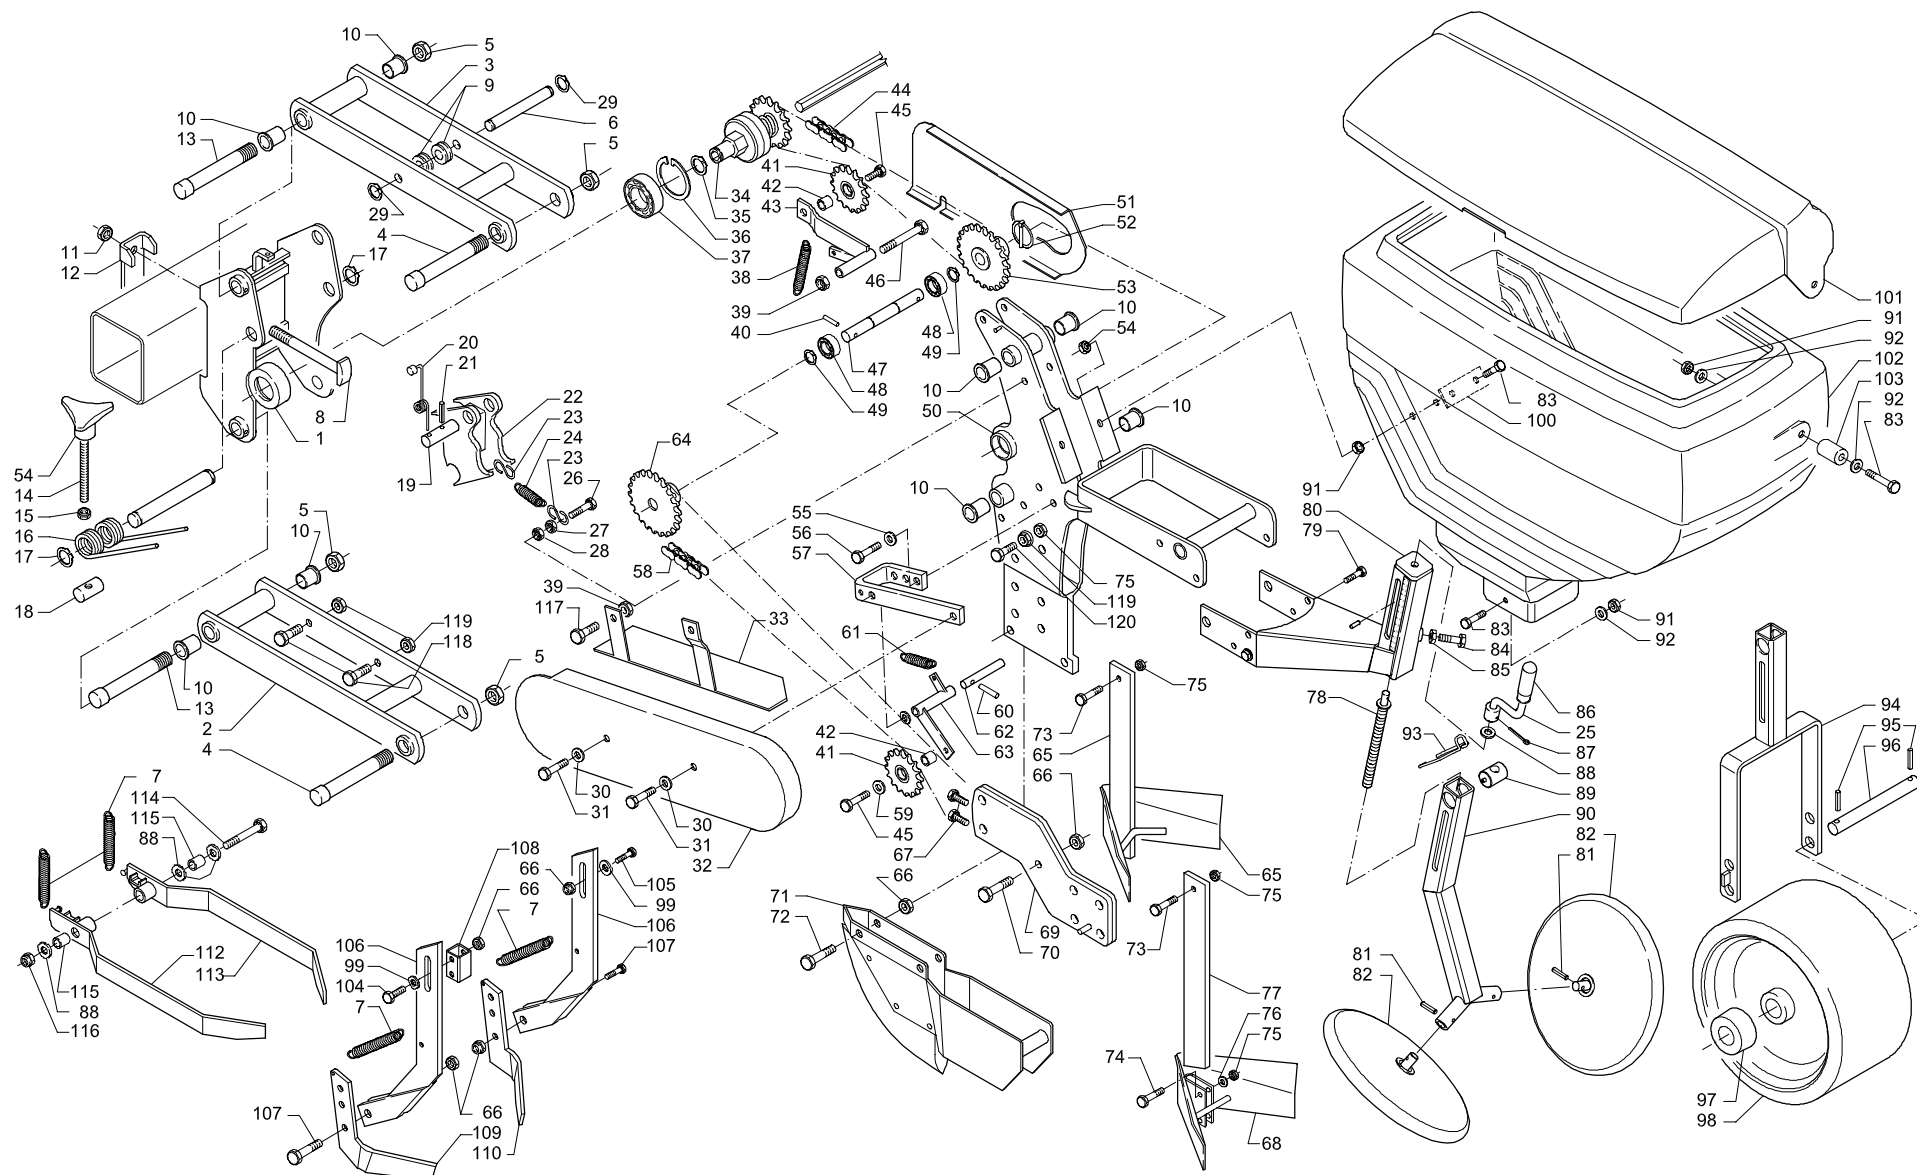

283.007/01

5 SOWING ELEMENT FUTURA


POSITION CODE DENOMINATION			POSITION CODE DENOMINATION		
78	10001708	COMP.S. SCREW FOR ADJUSTING	115	10021904	SPACER ZB
79	020.130	SCREW TE M10X 30 8.8 5737 ZB	116	021.113	SELF LOCKING NUT M 12 7473 ZB
80	10021701	SUPPORT			
81	024.351	ELASTIC PLUG D. 6X32 6873 NE			
82	040.209	RUBBER WHEEL FLEX 1" X 12"			
82	040.212	RUBBER WHEEL FLEX 2" X 13"			
83	021.815	SCREW TE M 6X 25 8.8 5739 INOX			
84	020.152	SCREW TE M12X 30 8.8 5739			
85	021.005	NUT E 6S M 12 5588			
86	095.047	HANDLE "RIMA" DI.14 L= 85			
87	024.308	ELASTIC PLUG D. 4X24 6873 NE			
88	023.040	FLAT WASHER M12=13 X24X2,5 6592			
89	10001709	BUSHING FOR ADJUSTABLE SCREW			
90	10002010	SUPPORT WHEEL FLEX			
91	021.406	SELF LOCKING NUT M 6 7473 INOX			
92	022.606	FLAT WASHER M 6= 6,5X18X1,5 9021			
93	10001711	LOCK SPRING ZB			
94	10001705	FORK			
94	10001751	FORK (V.MEXICO)			
95	024.351	ELASTIC PLUG D. 6X32 6873 NE			
96	10001714	PIN WHEEL ZB			
97		PROTECTION AGAINST DUSTY FOR WHEEL			
98	040.300	RUBBER WHEEL FLEX 370X165 CV			
99	023.030	FLAT WASHER M10=10,5X20X2			
100	10004217	PLATE			
101	10034215	TANK COVER			
102	10004210	WHITE TANK			
103	10001425	BUSHING FOR TIGHTENING CHAIN			
104	020.127	SCREW TE M10X 70 8.8 5737 ZB			
105	020.115	SCREW TE M10X 40 8.8 5737			
106	10001955	SUPPORT PLATE COVER SEED			
107	020.130	SCREW TE M10X 30 8.8 5737			
108	10001965	SPACER PIPE			
109	10001961	LEFT COVER SEED			
110	10001960	RIGHT COVER SEED			
112	10021901	LEFT COVER SEED			
113	10021902	RIGHT COVER SEED			
114	020.163	SCREW TE M12X100 8.8 5737			

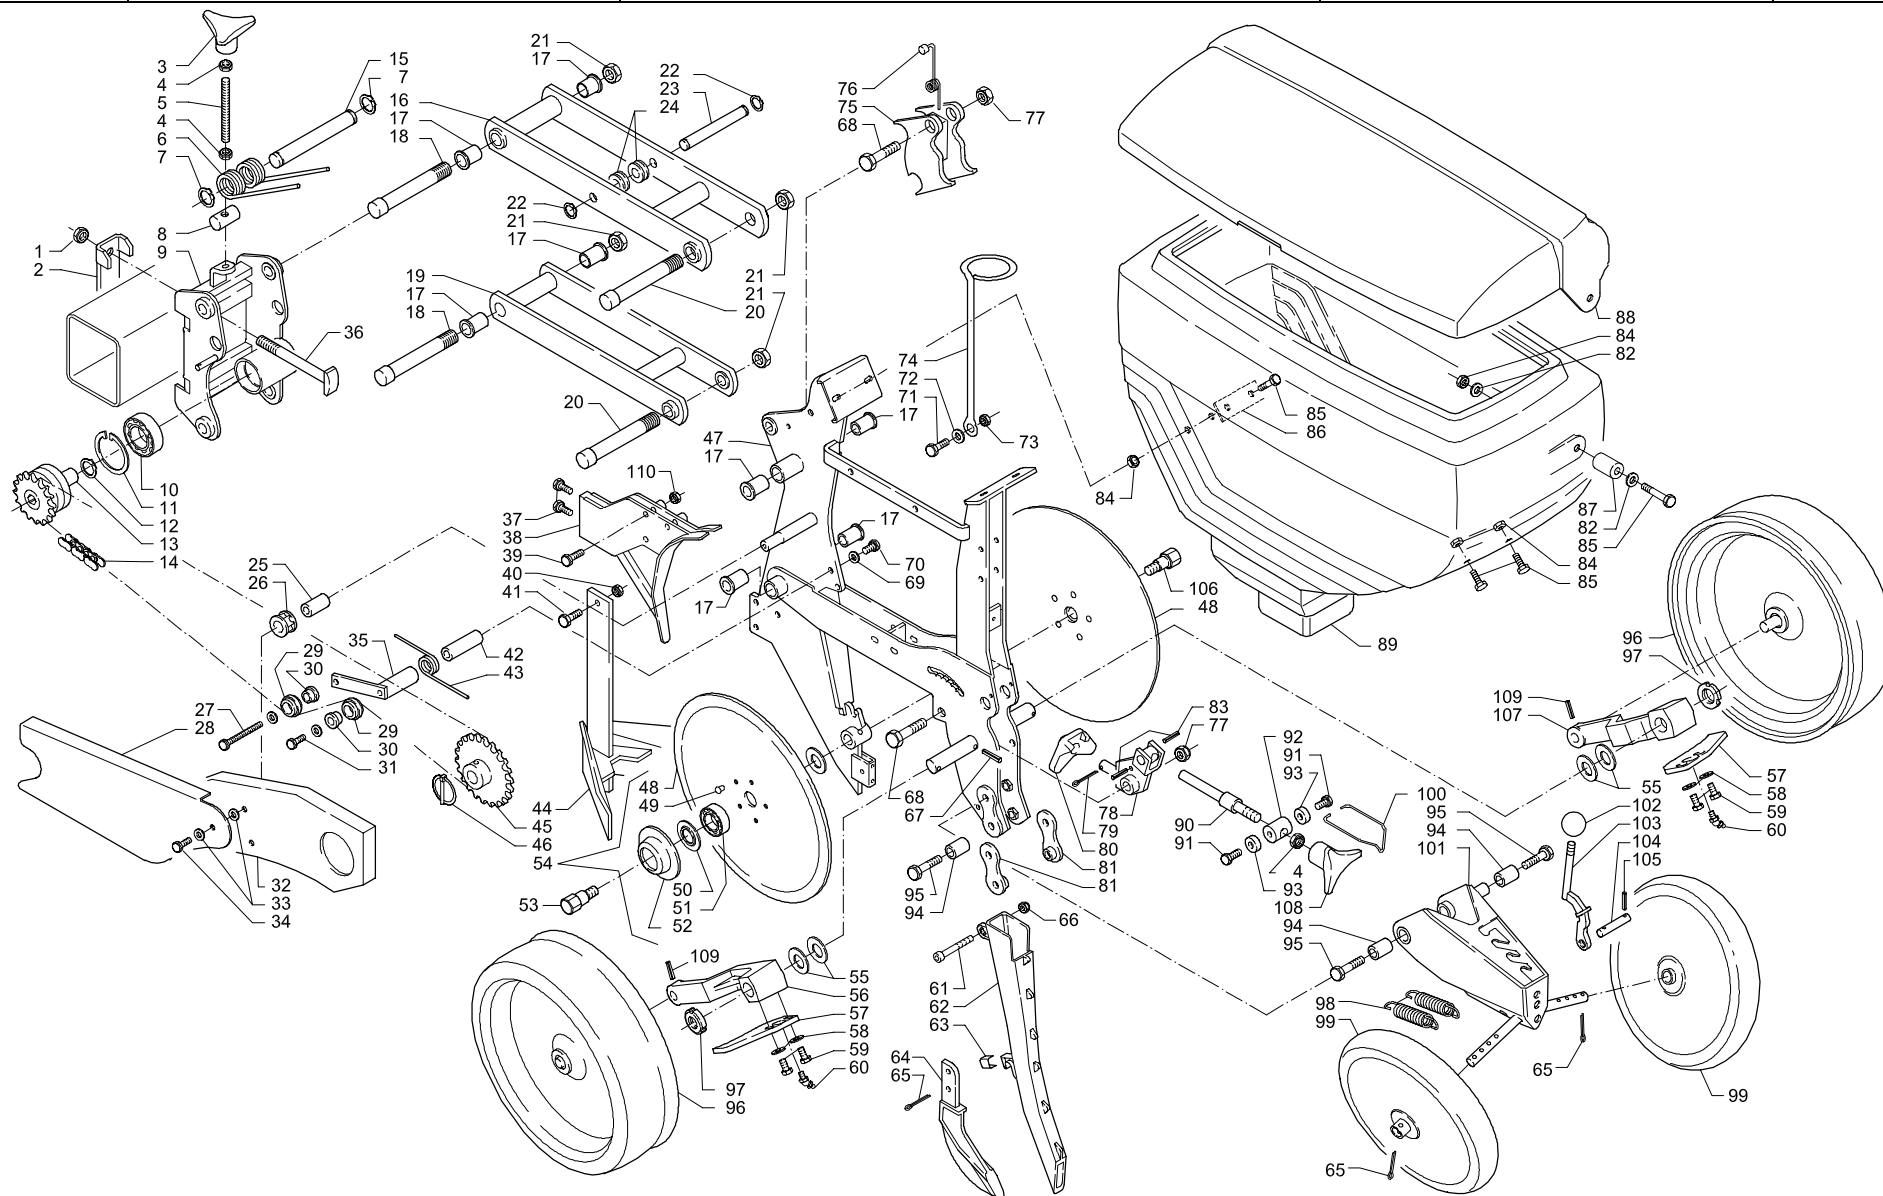

283.007/01

6 SOWING ELEMENT MAXI


POSITION	CODE	DENOMINATION	POSITION	CODE	DENOMINATION
1	021.105	SELF LOCKING NUT M14 7474	39	020.115	SCREW TE M10X40 5739
2	10017102	FRONT LINKAGE	40	021.101	SELF LOCKING NUT M6 7474
3	095.007	HAND WHEEL AT THREE POINTS	41	020.011	SCREW TE M 6X16 5739
4	021.004	NUT E 6S M10 5588	42	30031600	TIGHTENING PIN
5	10021077	BAR M10X150	43	30031618	TIGHTENING SPRING
6	10001055	SPRING ELEMENT	44	10001607	SHARE
7	028.108	SEEGER RING E D.25	45	30031620	DISTRIBUTOR PING Z20
8	10001063	DRIVING TIE-ROD SPRING	46	024.015	PLUG AT CLUTCH D6
9	10031020	LINKAGE PARALLELOGRAM	47	30031020	MAXI SUPPORT
10	050.002	BEARING 6006-2RS	48	30031203	DISC D380
11	028.010	SEEGER RING I D.55	49	023.842	RIVET FE D 6X16 UNI 748
12	028.110	SEEGER RING E D.30	50	050.500	SEEGER
13	10021240	FRICTION LOCK	51	050.105	BEARING 3204 A-2RS1
14	30031634	TRANSMISSION CHAIN MAXI	52	30031204	HUB
15	10001060	SPRING PIN	53	30031206	FIXING SCREW LEFT DISC
16	10001030	UPPER PARALLELOGRAM	54	30031202	SUFFOLK COULTER DISC
17	10001009	BUSHING	55	023.085	WASHER M25
18	10011050	FRONT PIN PARALLELOGRAM	56	30031094	LEFT SUPPORT WHEEL
19	10001031	LOWER PIN PARALLELOGRAM	57	30031062	SHEET SCRAPER MUD
20	10011110	REAR PIN PARALLELOGRAM	58	023.020	FLAT WASHER M8
21	021.125	SELF LOCKING NUT M18 7473	59	020.051	SCREW TE M 8X20 5739
22	028.098	SEEGER RING E D12	60	022.001	GREASER M6X1
23	10001075	PIN DRIVING SPRING	61	020.007	SCREW TE M6X45 5739
24	10001070	DRIVING SPRING	62	30881160	CHANNEL SEED FALL
25	052.180	SELF LOCKING BUSHING 16C20	63	30031178	LOCK STRAP
26	30031616	PULLEY	64	30031175	MAXI HAY CUTTER
27	020.041	SCREW TE M 6X 80 5739	65	024.236	SPLIT PIN D5X32 1336
28	30031630	UPPER CARTER	66	021.101	SELF LOCKING NUT M6 7474
29	096925	TIGHTENING CHAIN ROLL	67	024.345	ELASTIC PLUG D 6X40 6873
30	30031612	SLIDING PIN	68	020.256	SCREW TE M16X70 5739
31	020.015	SCREW TE M 6X35 5739	69	023.028	WASHER M10
32	30031632	LOWER CARTER	70	020.101	SCREW TE M10X25 5739
33	023.010	WASHER M6 6592	71	020.052	SCREW TE M 8X25 5739
34	020.011	SCREW TE M 6X16 5739	72	023.017	FLAT WASHER M8
35	30031606	TIGHTENER	73	021.114	SELF LOCKING NUT M8
36	10011025	SCREW M14	74	10001410	PIPE SUPPORT
37	020.100	SCREW TE M10X20 5739	75	30031401	HOOKING ELEMENT
38	30031421	SHARE SUPPORT MAXI	76	10031430	SPRING

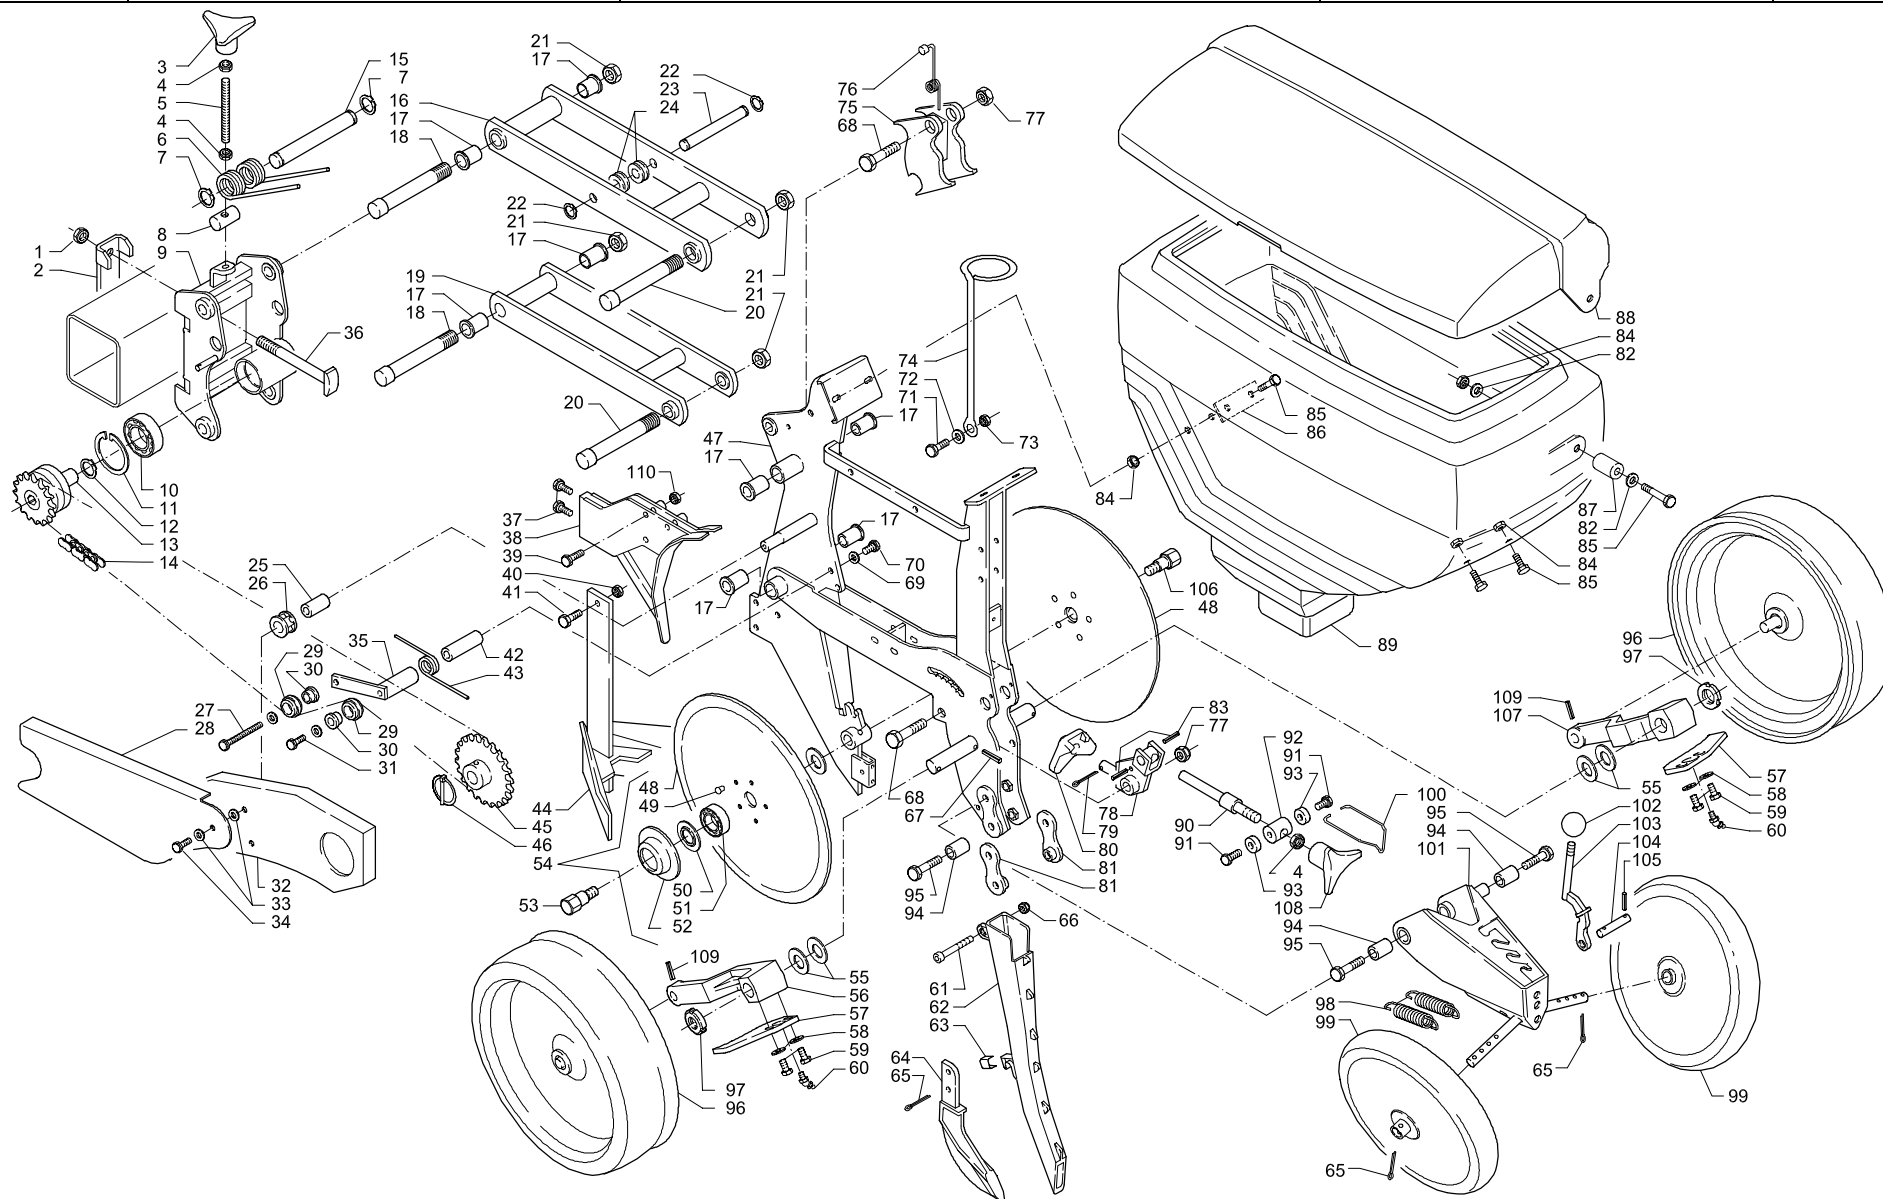

283.007/01

6 SOWING ELEMENT MAXI


POSITION	CODE	DENOMINATION	POSITION	CODE	DENOMINATION
77	021.123	SELF LOCKING NUT M16	108	095.013	HAND-WHEEL AT THREE POINTS M16
78	30031220	LINKAGE PLATE	109	024.344	ELASTIC PLUG D.6X30
79	024.245	SPLIT PIN D 6X45 1336	110	021.112	SELF LOCKING NUT M10 7473
80	30001225	ADJUSTING PLATE			
81	30031715	PALTE EXCLUSION WHEEL			
82	022.606	WASHER M6			
83	026.122	GRAIN CE 12.9 M 5X15			
84	021.406	SELF LOCKING NUT M 6 7473 INOX			
85	021.815	SCREW TE M 6X25 5739 INOX			
86	10004217	PLATE			
87	10001425	BUSHING			
88	10004215	COVER			
89	30004210	MAXI TANK			
90	30031212	ADJUSTING SCREW			
91	020.098	SCREW TE M10X16			
92	30031036	ADJUSTING DRIVING SCREW			
93	30031038	BUSHING DRIVING SCREW			
94	30031720	BALANCE BUSHING			
95	020.148	SCREW TE M12X45 5737			
96	30001092	WHEEL HEIGHT ADJUSTMENT SP=115			
96	30001093	WHEEL HEIGHT ADJUSTMENT SP=65			
97	021.246	SELF LOCKING METAL RING M25X45 5737			
98	30031340	TRACTION SPRING			
99	040.218	RUBBER WHEEL FLEX 1'			
99	040.219	RUBBER WHEEL FLEX 2'			
100	30001211	HANDLE LOCKING			
101	30031320	SHEET WHEEL SUPPORT			
102	095.019	HANDLE AT SPHERE M12			
103	30031360	ADJUSTING HANDLE			
104	30031328	PIN HANDLE			
105	024.306	ELASTIC PLUG D.4X30			
106	30031205	SCREW FLANGIATAFISSAGGIO DISCO DX			
107	30031095	SUPPORTO RUOTA FILLETTATO DX			

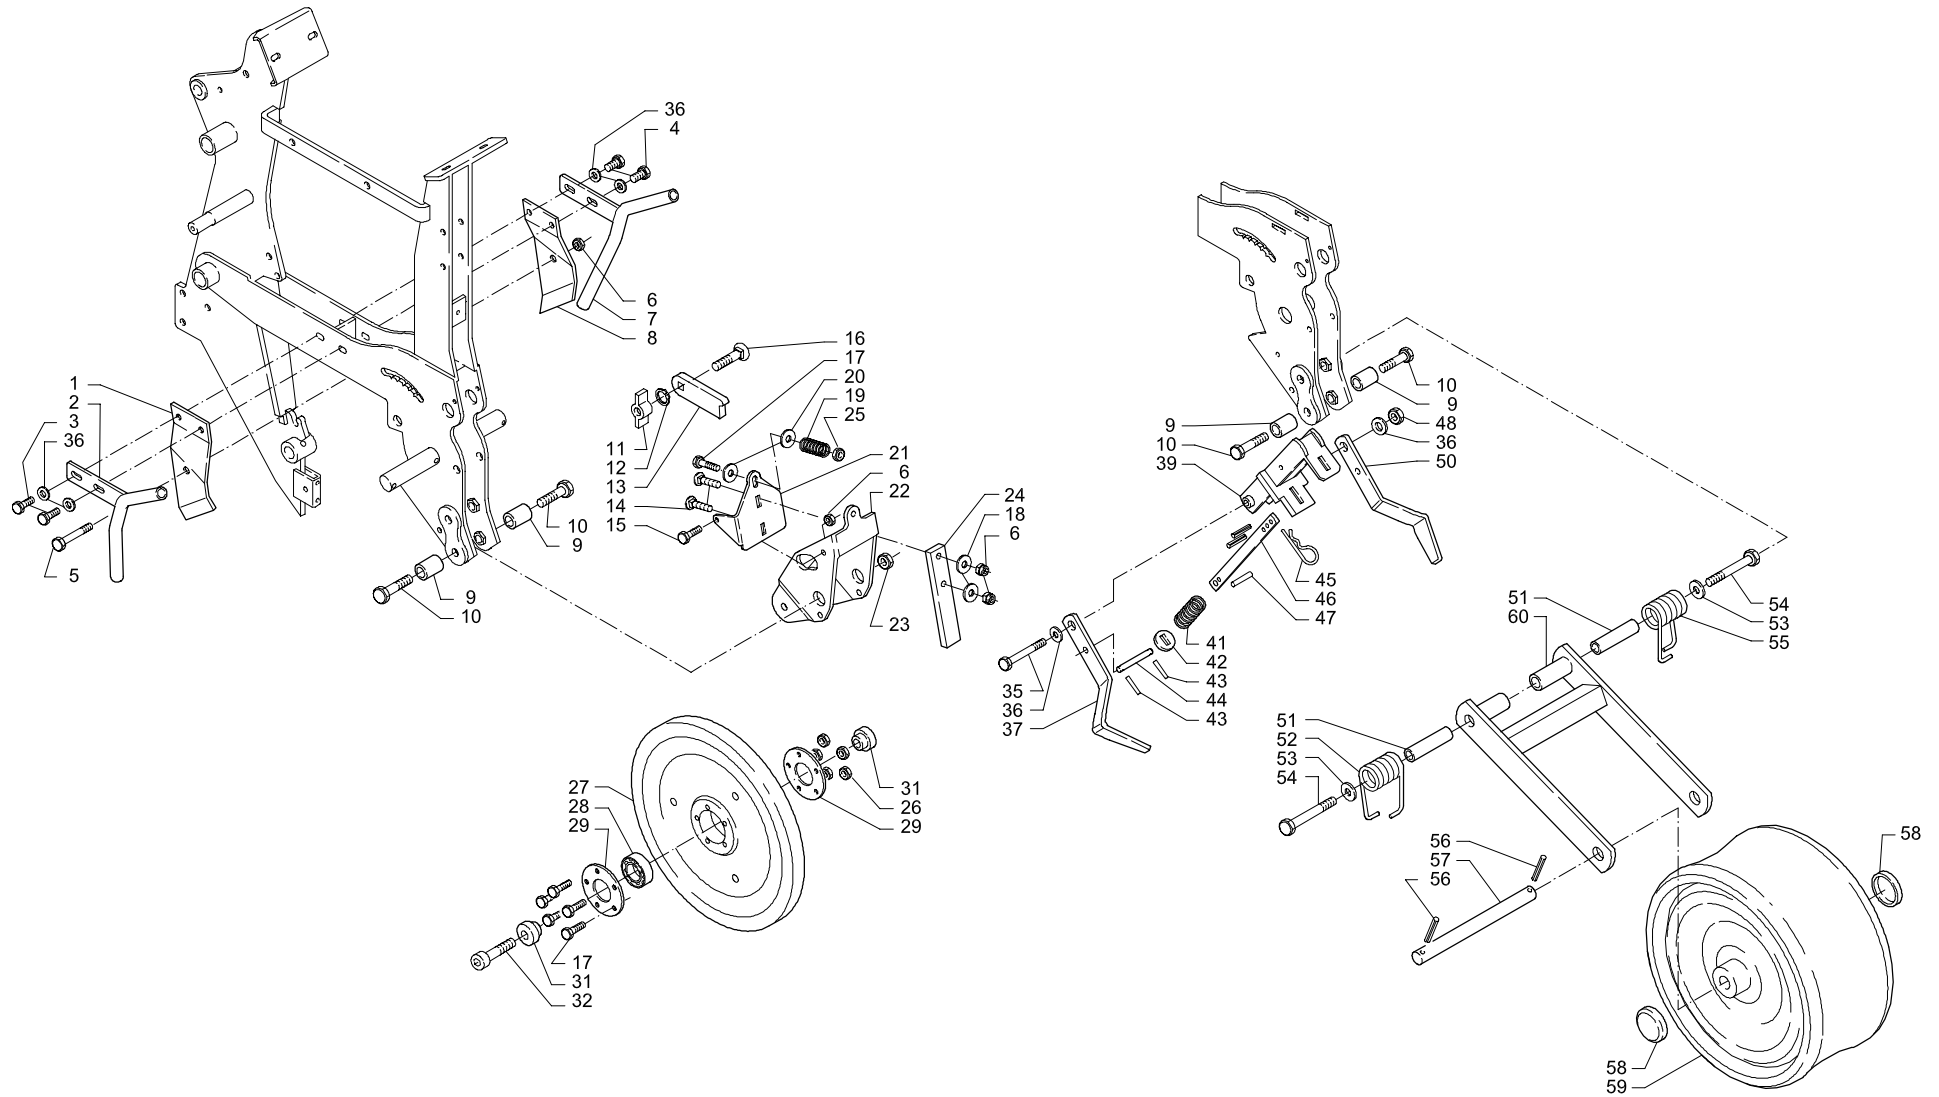

283.007/01

6.1 SOWING ELEMENT MAXI


POSITION	CODE	DENOMINATION	POSITION	CODE	DENOMINATION
1	30031107	SCRAPER MUD LEFT DISC	44	30021536	PIN BAR COVER SEED
2	30031193	PIPE FALL LEFT MICROGRANULATOR	45	024.003	SPLIT PIN "R" D.4
3	020.060	SCREW TE M8X70 5737	46	30031532	SPRING BAR COVER SEED
4	021.114	SELF LOCKING NUT M8	47	024.344	ELASTIC PLUG D.6X30
5	020.040	SCREW TE M6X100 5737	48	021.114	SELF LOCKING NUT M.8
6	021.115	SELF LOCKING NUT M6	50	30021528	RIGHT COVER SEED
7	30031192	PIPE FALL RIGHT MICROGRANULATOR	51	30031558	SPACER
8	30031106	SCRAPER MUD RIGHT DISC	52	30031563	LEFT SPRING
9	30031720	BUSHING	53	023.040	FLAT WASHER M12
10	020.148	SCREW TE M12X45 5737	54	020.162	SCREW TE M12X90 5737
11	095.258	FIXAGE M8	55	30031564	RIGHT SPRING
12	028.097	SEEGER RING E D.8	56	024.345	ELASTIC PLUG D.6X40
13	30031041	PLATE RELEASE WHEEL	57	10001714	PIN WHEEL
14	020.004	SCREW TTQST M6X25 5731	58		PROTECTION AGAINST DUSTY FOR WHEEL
15	020.011	SCREW TE M6X16 5739	59	040.300	RUBBER WHEEL FLEX 370X165
16	020.576	SCREW TTQST M8X40 5731	60	30031552	LINKAGE PRESS SEED WHEEL
17	020.014	SCREW TE M6X30 5739			
18	023.005	WASHER M6			
19	30001108	SPRING OF COMPRESSION			
20	020.004	SCREW TE M6X35 5737			
21	30031711	HOLDER SCRAPER WHEEL			
22	30031705	WHEEL BALACING			
23	021.113	SELF LOCKING NUT M12			
24	30031712	RASCHIETTO RUOTINO PREMISEME			
25	021.029	NUT M6			
26	021.505	FLANGED NUT M6			
27	30039610	PRESS SEED WHEEL			
28	050.105	BEARING 3204 A-2RS1			
29	30031722	SCREEN BUSHING			
31	30031721	BUSHING PRESS SEED WHEEL			
32	020.661	SCREW TSPEI M10X60 5933			
35	020.059	SCREW TE M8X65 5737			
36	023.020	WASHER M8			
37	30021530	LEFT COVER SEED			
39	30031520	LINKAGE COVER SEED			
41	30021510	SPRING COVER SEED BAR			
42	30021534	WASHER FOR BAR			
43	024.280	ELASTIC PLUG D.4X24			

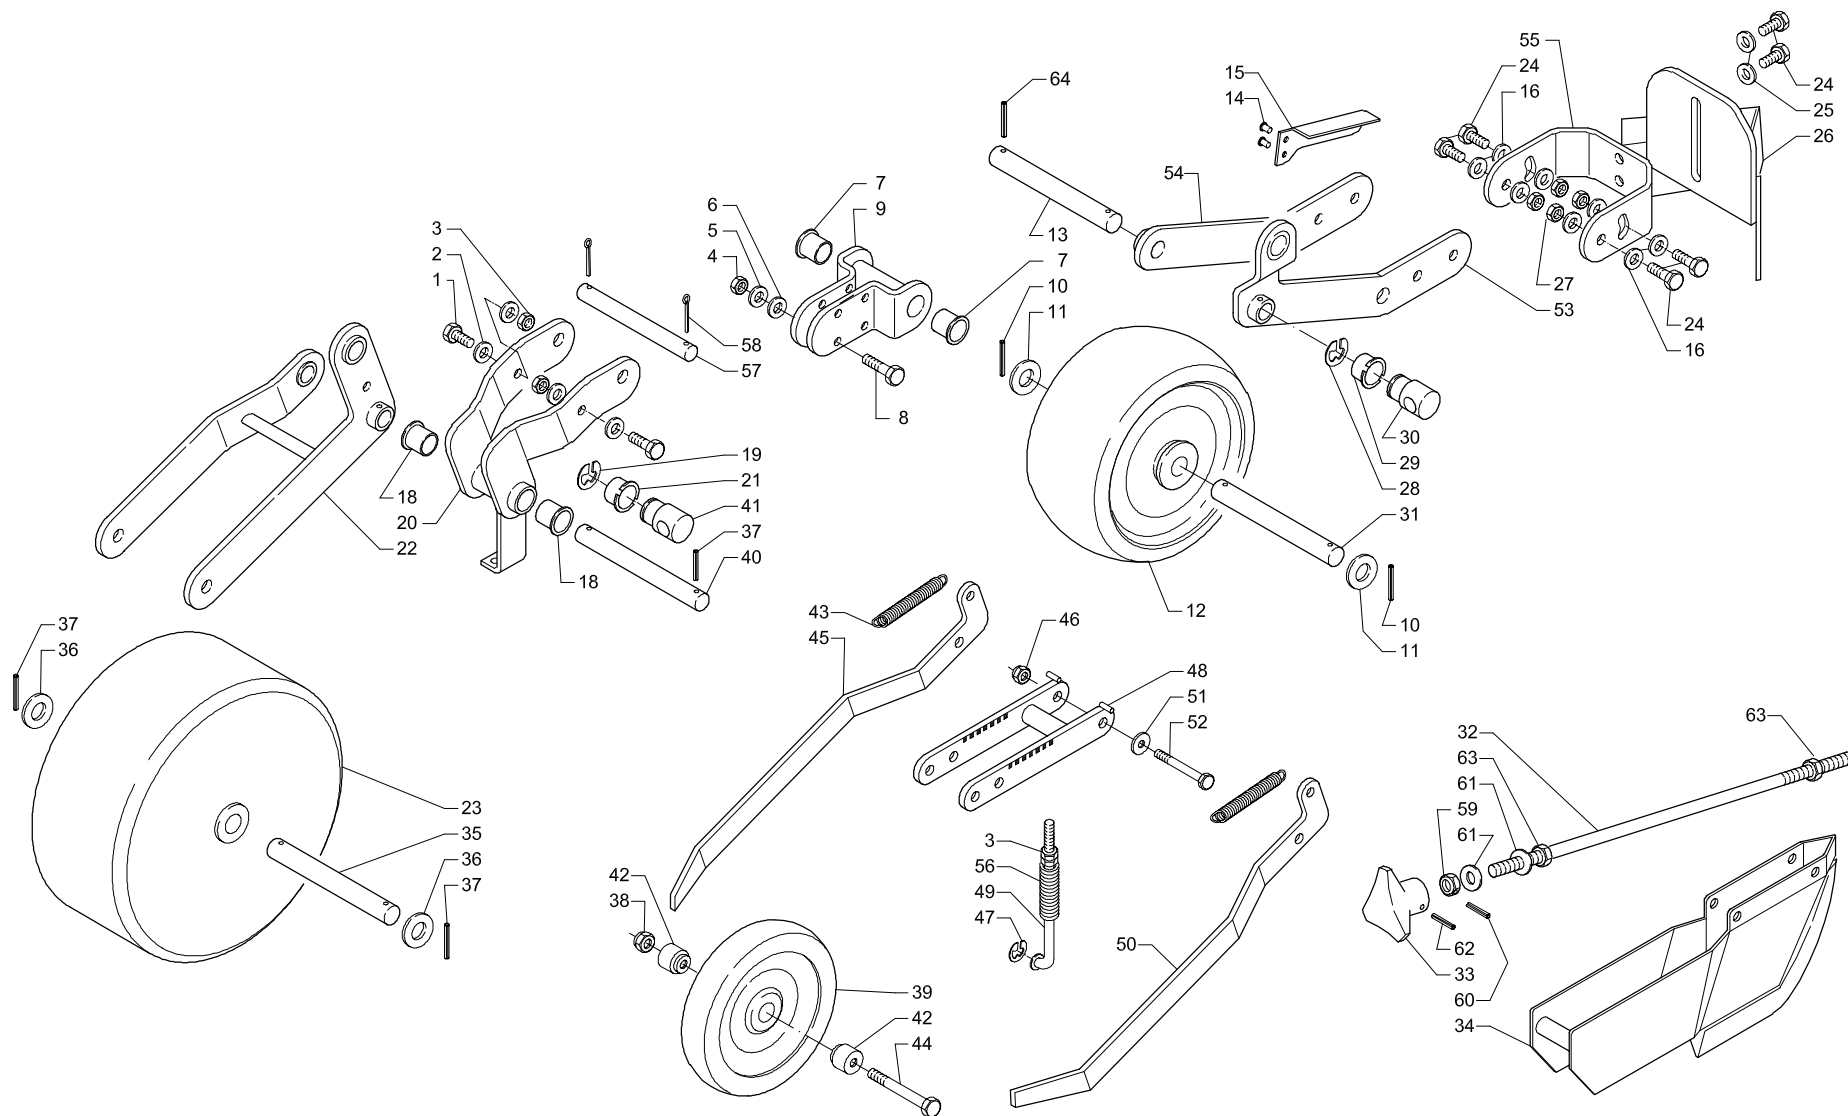

283.007/01

7 SUGAR BEET KIT


POSITION CODE DENOMINATION			POSITION CODE DENOMINATION		
1	020.102	SCREW TE M10X30 8.8 5739 ZB	41	10001339	REAR SHAFT LEVER
2	023.030	FLAT WASHER M10=10,5X20X2 6592 ZB	42	10001325	SPACER WHEEL
3	021.027	NUT E 6S M 10 5587 ZB	43	10001331	SPRING COVER SEED
4	021.027	NUT E 6S M10 5587 ZB	44	020.113	SCREW TE M10X80 8.8 5739 ZB
5	023.030	FLAT WASHER M10=10,5X20X2 6592 ZB	45	10001322	LEFT COVER SEED
6	023.302	WASHER GROWER M10-D.10,5 1751 ZBD	46	021.112	SELF LOCKING NUT M10 7473 ZB
7	10001009	BUSHING	47	028.408	ELASTIC RING DI.7 - DE14 7434
8	020.104	SCREW TE M10X40 8.8 5739 ZB	48	10001326	CONNECTION WHEEL
9	10001351	LINKAGE FRONT WHEEL	49	10001323	SUPPORTO SPRING ZB
10	024.345	ELASTIC PLUG D. 6X40 6873 NE	50	10001321	RIGHT COVER SEED
11	023.080	FLAT WASHER M20=21X37X3 6592 ZB	51	023.030	FLAT WASHER M10=10,5X20X2 6592 ZB
12	040.302	RUBBER WHEEL FLEX D.280X100X120X20	52	020.136	SCREW TE MM10X90 8.8 5739 ZB
13	10001338	SHAFT SUPPORT REAR WHEEL	53	10001362	RIGHT ROW
14	020.577	SCREW TC M 5X20 8.8 7687 ZB	54	10001365	LEFT ROW
15	10001364	SUPPORT LABEL ADJUSTMENT	55	10001369	SUPPORT SHARE CLODS
16	023.302	WASHER GROWER M10-D.10,5 1751 ZBD	56	10001324	SPRING WHEEL
18	10001009	BUSHING	57	10001347	LINKAGE SHAFT
19	028.414	ELASTIC RING DI.19 - DE.37 7434	58	024.231	SPLIT PIN D.4X60 ZB 1336
20	10021341	LINKAGE REAR WHEEL	59	10001381	NUT UPPER LOCK
21	050.221	FLANGED BUSHING "SFB" SF-1F 25X21,5	60	024.308	ELASTIC PLUG D.4X24 6873 NE
22	10001332	SUPPORT REAR WHEEL	61	023.046	FLAT WASHER M16=17 X30X3 6592 BRON
23	040.300	RUBBER WHEEL FLEX 370X165 CV (MBF)	62	024.322	ELASTIC PLUG D.5X30 6873 NE
24	020.100	SCREW TE M10X20 8.8 5739 ZB	63	021.024	NUT E 6S M16 5587 ZB
25	023.030	FLAT WASHER M10=40,5X20X2 6592 ZB			
26	10001370	SHARE CLODS			
28	028.414	ELASTIC RING DI.19 - DE.37 7434			
29	050.221	FLANGED BUSHING "SFB" SF-1F 25X21,5			
30	10001368	FORNT SHAFT LEVER			
31	10001367	SAHFT FRONT WHEEL			
32	10001382	CONNECTION BAR			
33	095.009	HANDLE "GAMM"D.16			
34	10001835	HAY CUTTER SUAGAR BEET			
35	10001714	PIN WHEEL			
36	023.080	FLAT WASHER M20=21X37X3 6592 ZB			
37	024.345	ELASTIC PLUG D.6X40 6873 NE			
38	021.027	NUT E 6S M10 5587 ZB			
39	040.301	RUBBER WHEEL FLEX D.185X27X20			
40	10001338	SUPPORT SHAFT REAR WHEEL			

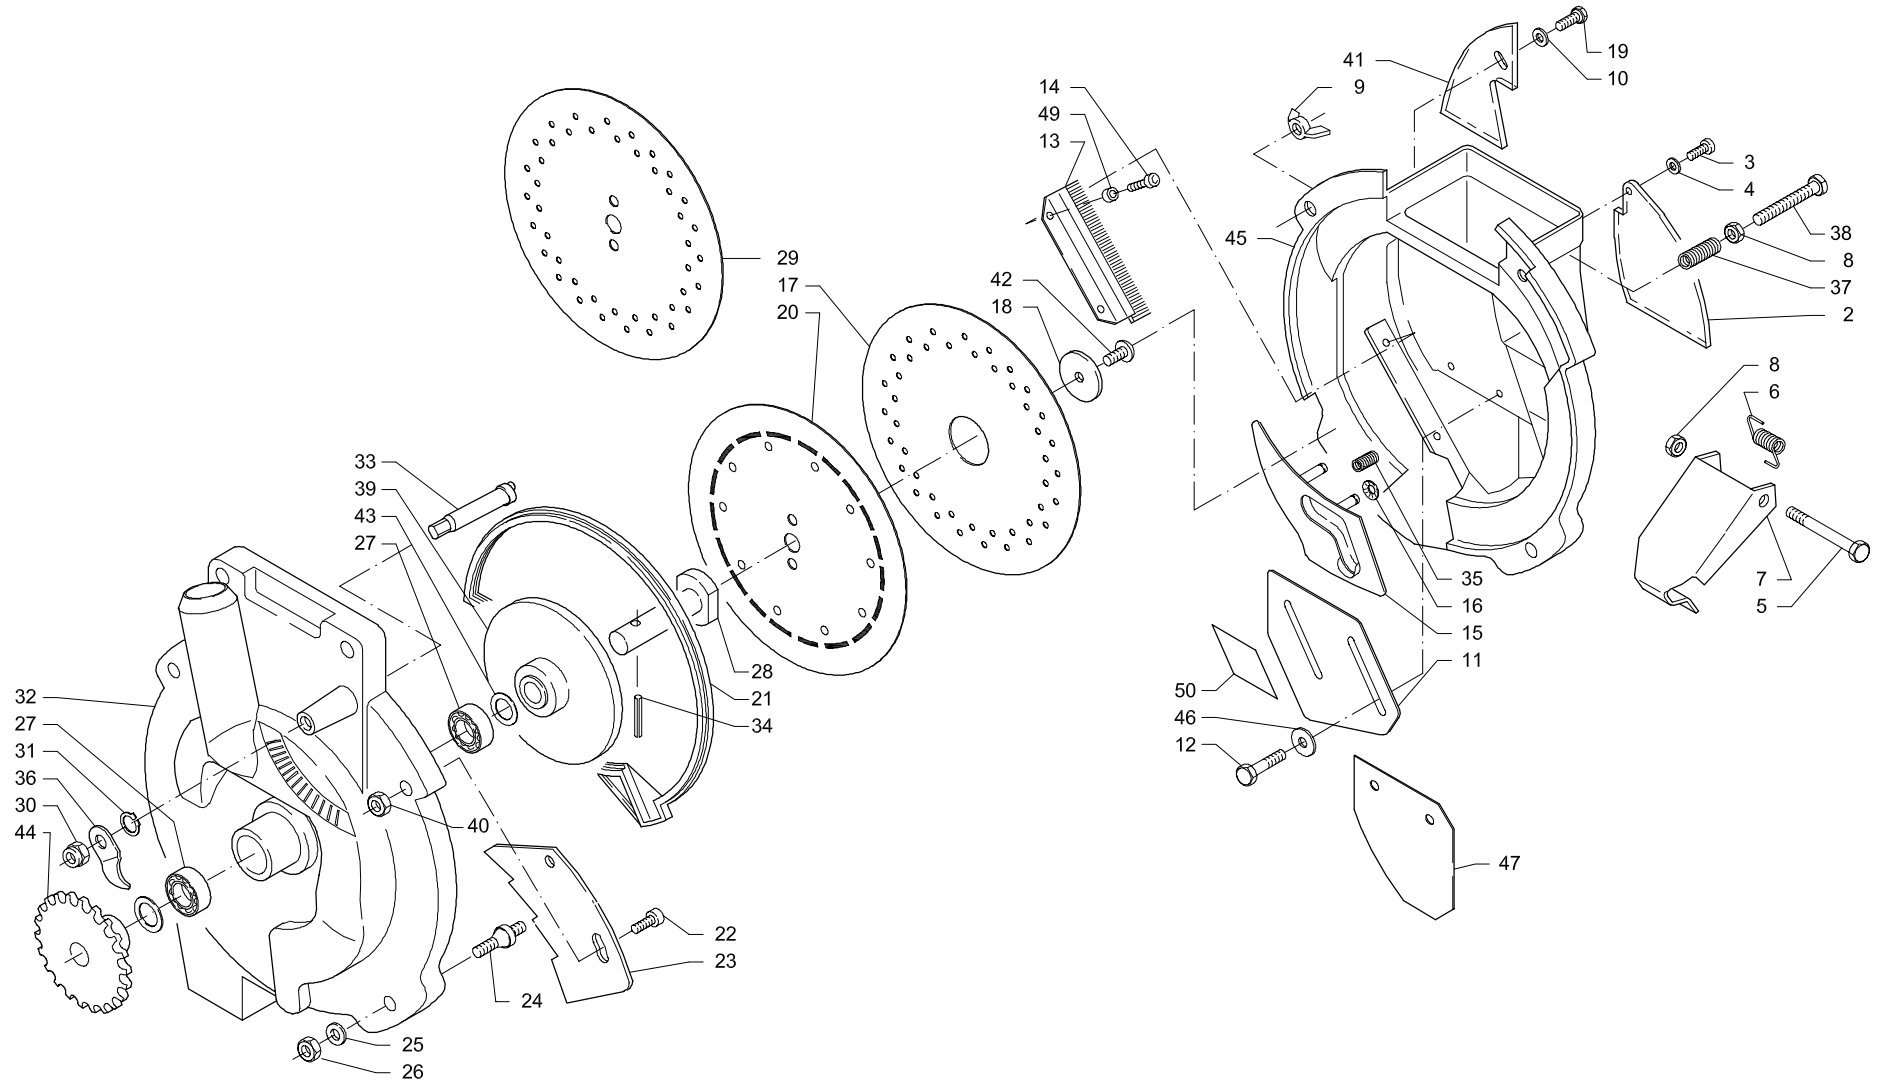


283.007/01

8 SEED DISTRIBUTOR

POSITION	CODE	DENOMINATION	POSITION	CODE	DENOMINATION
1			35	10004127	SPRING D.15X24
2	10024105	INSPECTION W WINDOW (PETG-TRASP.)	36	10004120	SELECTOR INDICATOR
3	020.677	SCREW TC A. 4,2X 13 INOX 6954	37	10004128	SPRING D.9,6X20
4	022.704	FLAT WASHER M 4= 4,3X 9X0,8 6592	38	020.736	SCREW TTQST M 6X 50 4.6 5731
5	020.032	SCREW TE M 6X 80 8.8 5737 ZB	39	10024114	DISTRIBUTOR DISC
6	10004126	SPRING DOOR	40	021.001	NUT E 6S M 5 5588 ZB
7	10014125	DOOR FOR UNLOADING SEED	41	10034137	PIERCED FRONT CLOSING (PETG-TRASP.)
8	021.101	SELF LOCKING NUT M 6 7474 ZB	42	020.707	SCREW TBEI M 8X 12 7380 AISI304
9	095.258	DIWING NUT OF FIXING M8 GAMM GB/40/FP	43	028.307	RING TYPE "PS" 17X24X0,2 DIN988
10	023.005	FLAT WASHER M 6= 6,6X18X2 6593	43	028.308	RING TYPE "PS" 17X24X0,3 DIN988
11	10004112	BULKHEAD DISTRIBUTOR	43	028.309	RING TYPE "PS" 18X25X1 DIN988
12	021.813	SCREW TE M 4X 12 8.8 5739 INOX	44	10001404	PIN RELEASE DISTRIBUTOR TRANSMISSION
13	10034124	BRUSH DISTRIBUTOR 5X25 L=181	45	10004102	COVER DISTRIBUTOR
14	020.490	SCREW TCEI M 4X 16 8.8 5931 ZB	46	023.011	FLAT WASHER M 4= 4,3X16X1,5 6593
15	10004118	PRESSURE FOR DISTRIBUTOR	47	10024102	DISTRIBUTOR CURTAIN
16	023.976	ELASTIC FIXING WITH CAP D.6 ZB	48	023.790	SPRING FOR BEARING 29,7X17,4X0,4 ZB
17	10004310	DISC WITHOUT PINS 24 HOLES D.5,5 (6/10)	49	10034136	BUSHING LOCK BRUSH
18	10024121	DISC CENTRING SOWING DISCS	50	10034201	LABEL ADJUSTMENT BULKHEAD
19	020.009	SCREW TE M 6X 12 8.8 5739 ZB			
20	10024122	CHOCKE DISC			
21	10004117	GASKET DISTRIBUTOR			
22	10024113	PIN PIVOT SELECTOR			
23	10004106	SELECTOR			
24	10004109	LOCK CLOSING DISTRIBUTOR			
25	023.708	WASHER "SCHNORR" M 8= 8,4X13 X0,8			
26	021.003	NUT E 6S M 8 5588 ZB			
27	050.101	BEARING 6003-2RS1			
28	10024108	SHAFT SLIDING FOR FUTURA			
28	30034108	SAHFT SLIDING FOR MAXI			
29		SOWING DISC WITH PINS			
30	021.112	SELF LOCKING NUT M 10 7473 ZB			
31	028.099	SEEGER RING E D. 10 7435/471			
32	10004103	DISTRIBUTOR BODY FOR FUTURA			
32	10034103	DISTRIBUTOR BODY FOR MAXI			
33	10004110	SAHFT SELECTOR			
34	024.327	ELASTIC PLUG D. 5X32 6873 NE			

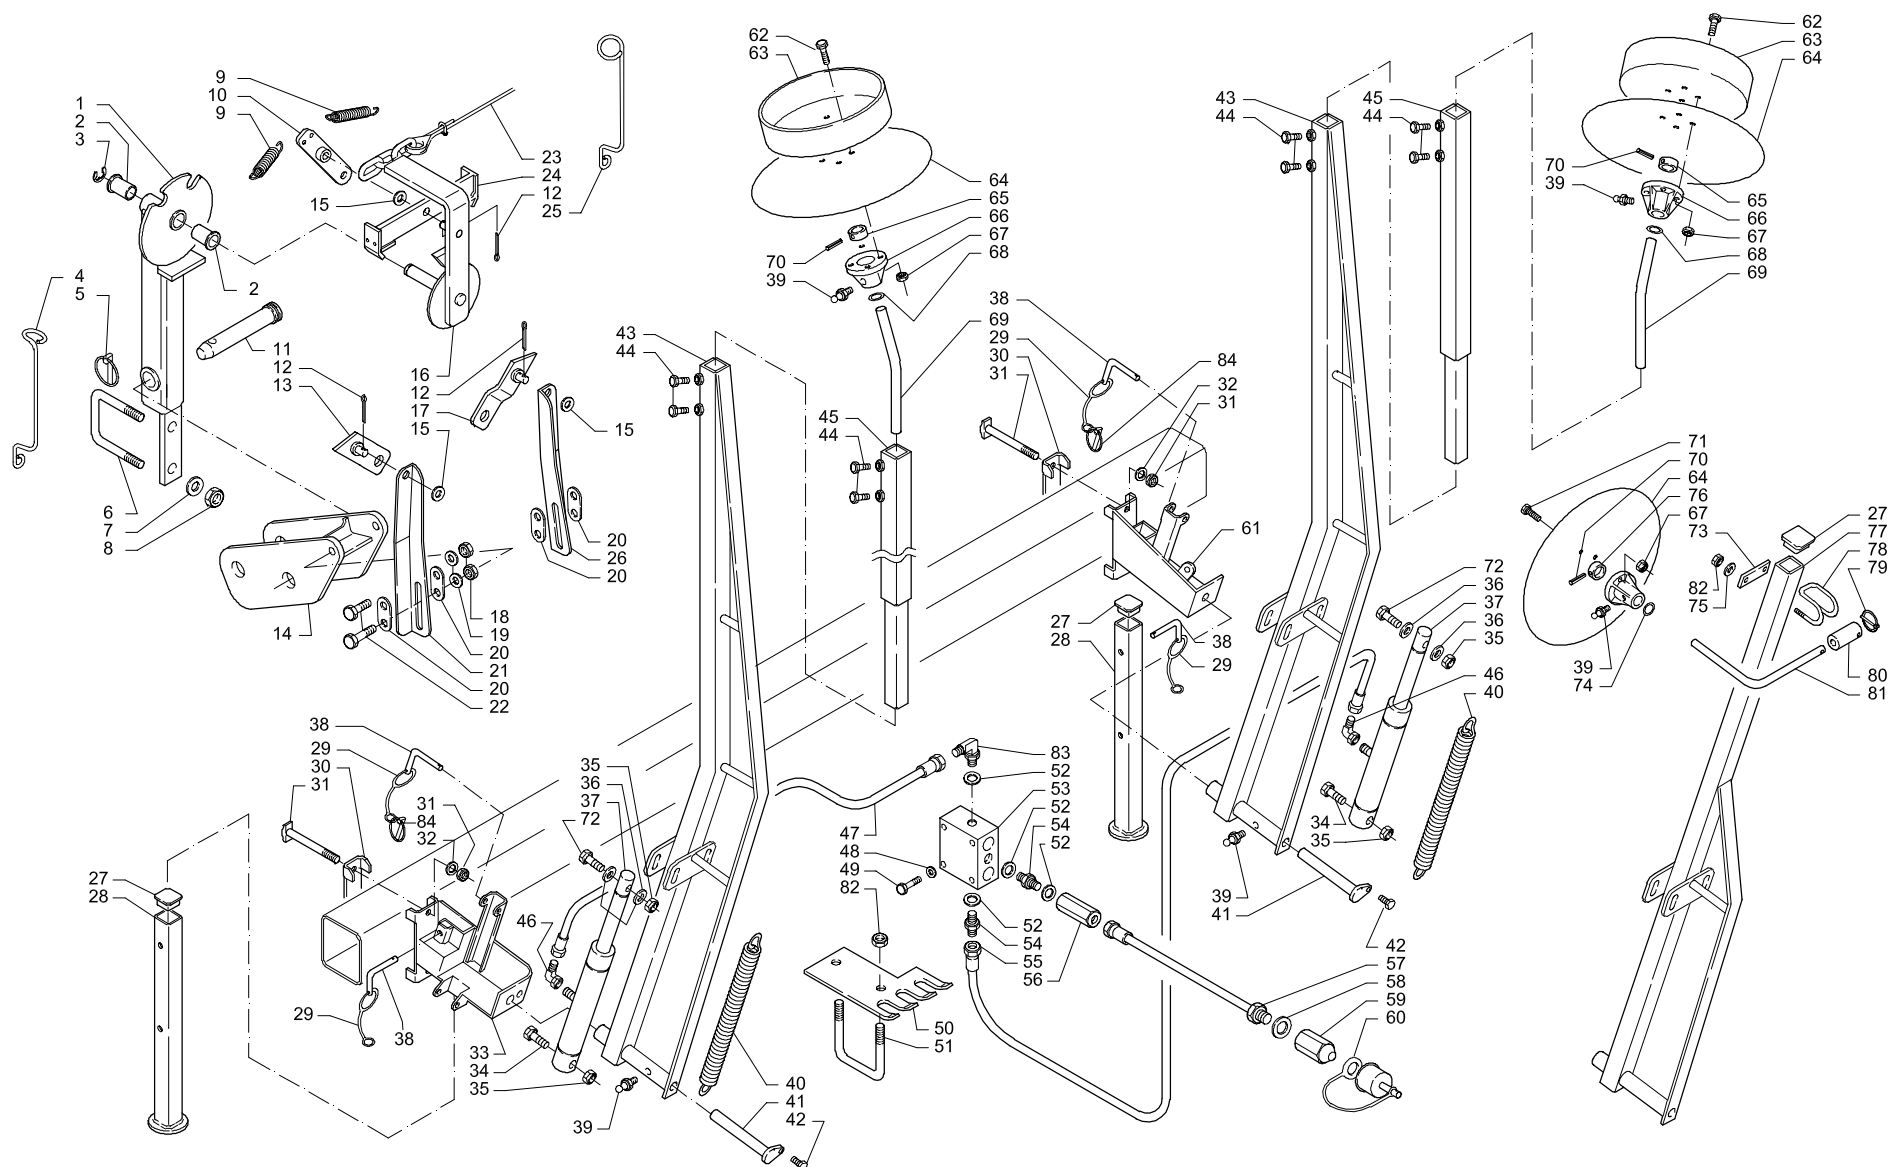

POSITION	CODE	DENOMINATION	POSITION	CODE	DENOMINATION
1	10026206	CONTROL HARM	38	10016918	PLUG LOCK STANDING FOOT
2	10001009	BUSHING	39	022.001	GREASER M 6X1 UNI 7663A DIR.
3	028.104	SEEGER RING E D. 18 7435/471	40	10046190	SPRING
4	10016965	DRIVING LEFT ROPE	41	10046160	PIN ROW MARKER
5	024.015	PLUG AT CLUTCH D. 6 B=48 ZG	42	020.052	SCREW TE M 8X 25 8.8 5739 ZB
6	10003120	U-BOLT M 12 ZB	43	10046145	LONG HARM RIGHT/LEFT
7	021.113	SELF LOCKING NUT M 12 7473	44	020.200	SCREW TE M14X 30 8.8 5739 ZB
8	023.040	FLAT WASHER M12=13	45	10046195	AXLE EXTENSION "TRACTOR CENTER"
9	10006240	SPRING	46	060.178	CONNECTION. 90° M 1/4"+F GIR. 1/4"
10	10006207	CLASP	47	10035213	PIPE FLEX R1 FD 1/4" + FD 1/4" L=3500
11	10000355	PIN THIRD POINT	47	10035215	PIPE FLEX R1 FD 1/4" + FD 1/4" L=2500
12	024.209	SPLIT PIN D. 2,5X25 ZB 1336	48	023.010	WASHER M6=6,3X12X1,6 6592 ZB
13	45006542	LEVER LEFT CLASP	49	020.020	SCREW TE M6X60 8.8 5737 ZB
14	10026204	ROW MARKER SUPPORT	50	10040400	SUPPORT PIPES
15	023.020	FLAT WASHER M8=8,4X16X1,6 6592	51	156107	U-BOLT M10 FIXING SUPPORT
16	10006208	SUPPORT END RUNNING	52	061.302	OLEOSTAR VALVE VAPS/14 DETENT
17	45006540	LEVER RIGHT CLASP	53	060.199	NIPPLE 1/4"
18	021.113	SELF LOCKING NUT M 12 7473	55	10035214	PIPE FLEX R1 FD 1/4" + FD 1/4" L=3000
19	023.040	FLAT WASHER M12=13	55	10035216	PIPE FLEX R1 FD 1/4" + FD 1/4" L=2000
20	10006210	PLATE	56	061.026	VALVE ONE WAY OF 1/4"
21	10006201	RIGHT STIRRUP	57	10005240	PIPE FLEX 1/4"-FD 1/4"X MD 1/2" L=2000
22	020.101	SCREW TE M12X30 UNI 5737	58	060.402	WASHER 1/2" 21,5X27X1,5
23	10016961	ROPE FOR FRAME LENGTH 2500	59	060.380	MALE CLUTCH 1/2" ZN ART.A060MG08D
23	10016963	ROPE FOR FRAME LENGTH 4000	60	095.023	PLASTIC PLUG FOR FAST MALE-FEMALE CLUTCH 1/2"
24	10006211	EQUALIZER	61	10046121	BOX LEFT HARM HOLDER
25	10016964	DRIVING RIGHT ROPE	62	020.054	SCREW TE M 8X 35 8.8 5739 ZB
26	10006202	LEFT STIRRUP	63	10046185	RING
27	095.077	PLUG FOR PIPE Q. 40X 40 S.5 POL.	64	153365	ROW MARKER DISC D.325 VE
28	10046175	STANDING FOOT ROW MARKER	65	153368	SPACER D=25X15 ZB
29	024.080	RUBBER TIE-ROD	66	155169	DISC HUB ROW MARKER +
30	10017102	FRONT LINKAGE	67	021.003	NUT E 6S M 8 5588 ZB
31	10011025	SCREW M14	68	046.301	RING OR D.25 SP3
32	023.035	FLAT WASHER M14	69	10046165	MAIN SHAFT ROW MARKER
33	10046120	RIGHT HARM HOLDER	70	024.335	ELASTIC PLUG D. 6X35 6873 INOX
34	020.257	SCREW TE M16X 90 8.8 5737 ZB	71	020.052	SCREW TE M 8X 25 8.8 5739 ZB
35	021.123	SELF LOCKING NUT M 16 7473 ZB	72	020.269	SCREW TE M16X 70 8.8 5737 ZB
36	023.045	FLAT WASHER M16=17 X30X3 6592 ZB	73	10016932	PLATE
37	10046170	CYLINDER	74	046.030	RING OR 4081 DI=20.22 TWINE 3.53

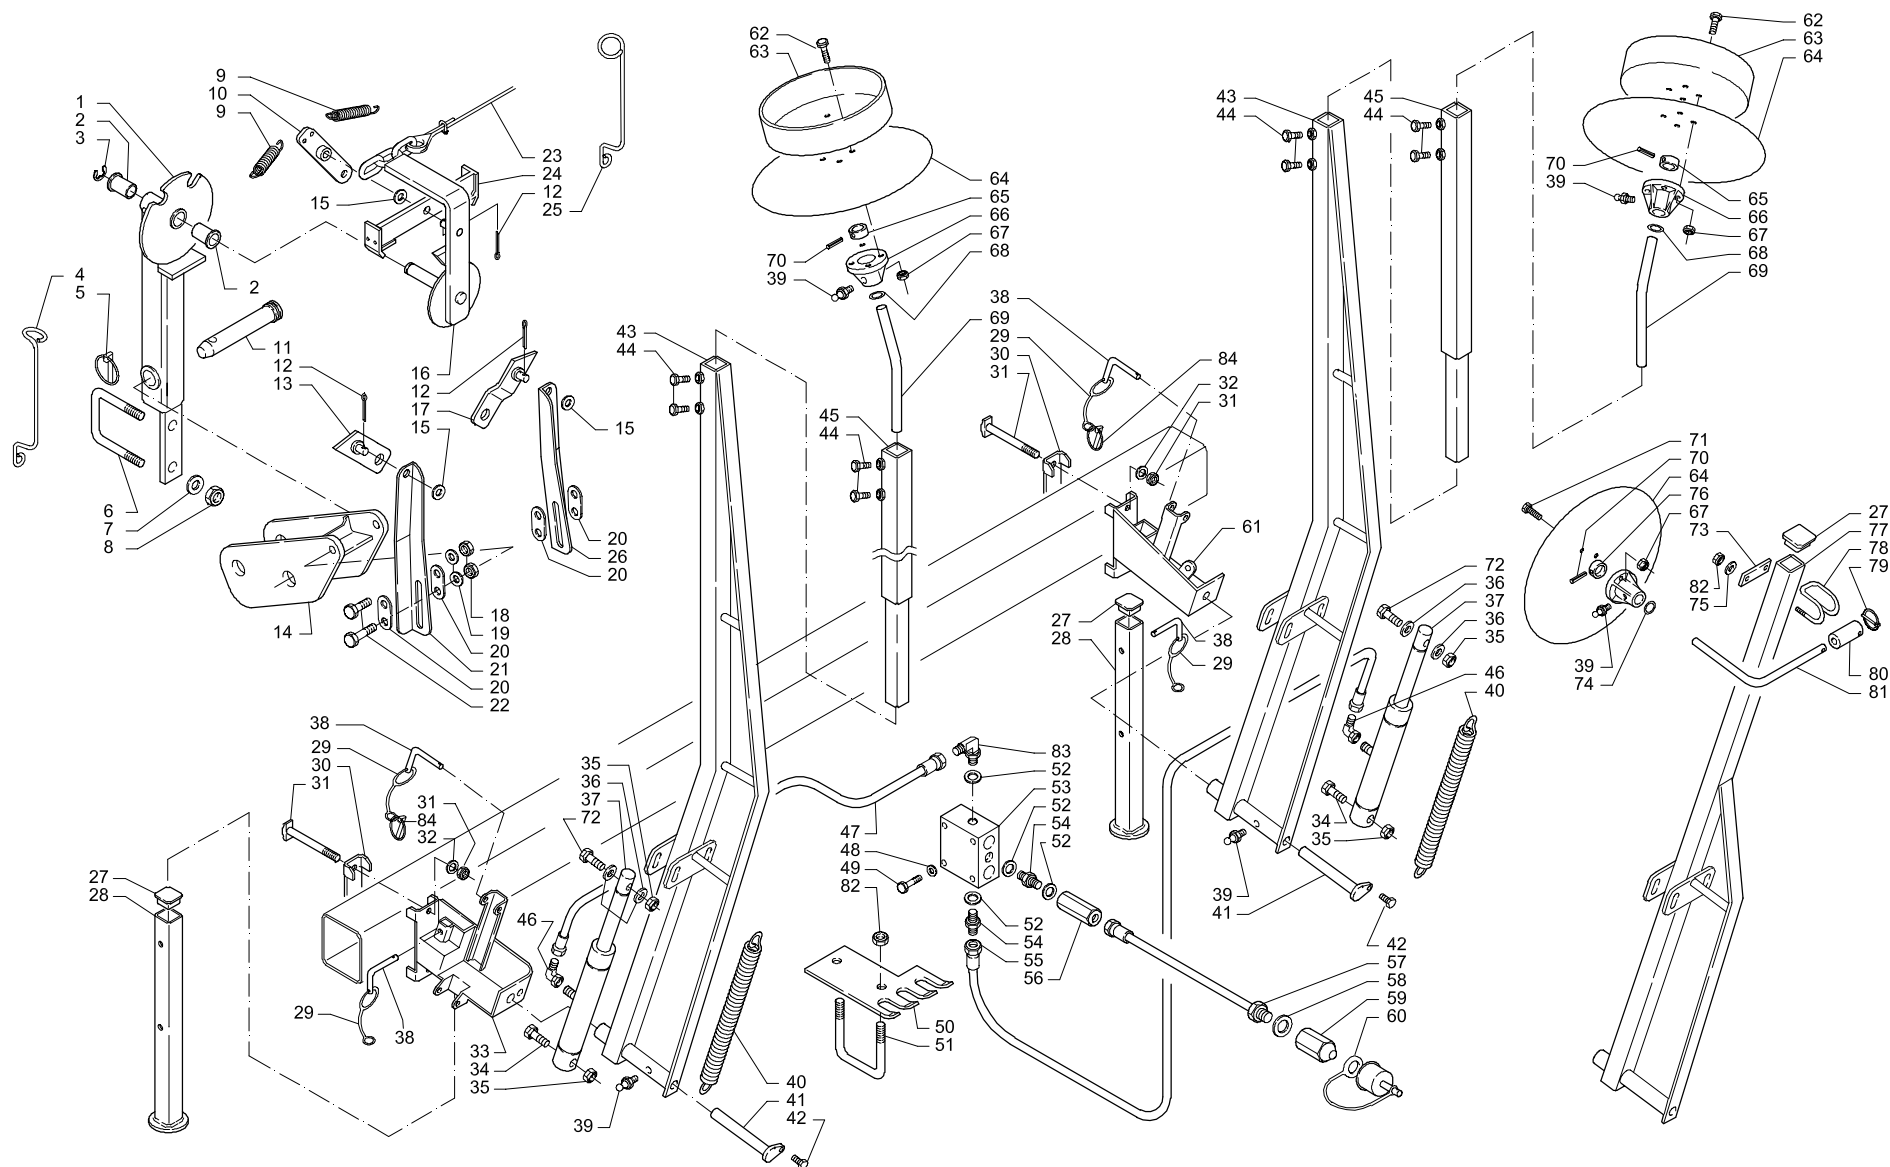


283.007/01

9

ROW MARKER

POSITION	CODE	DENOMINATION
----------	------	--------------


75	023.027	FLAT WASHER M10=11 X30X2,5 6593 ZB
76	10036973	SPACER ZB
77	10046140	HARM SHORT ROW MARKER RIGHT/LEFT
78	10036972	U-BOLT LOCK ROW MARKER
79	024.029	PLUG D. 7 C=50 D=45
80	10036971	SUPPORT PIPE SHAFT
81	10016931	MAIN SHAFT
82	021.103	SELF LOCKING NUT M 10 7474 ZB
83	058.311	CRANK 90° M-M WITH TURNING NUT 1/4"
84	024.003	ELASTIC SPLIT PIN D.4 8833-A ZB

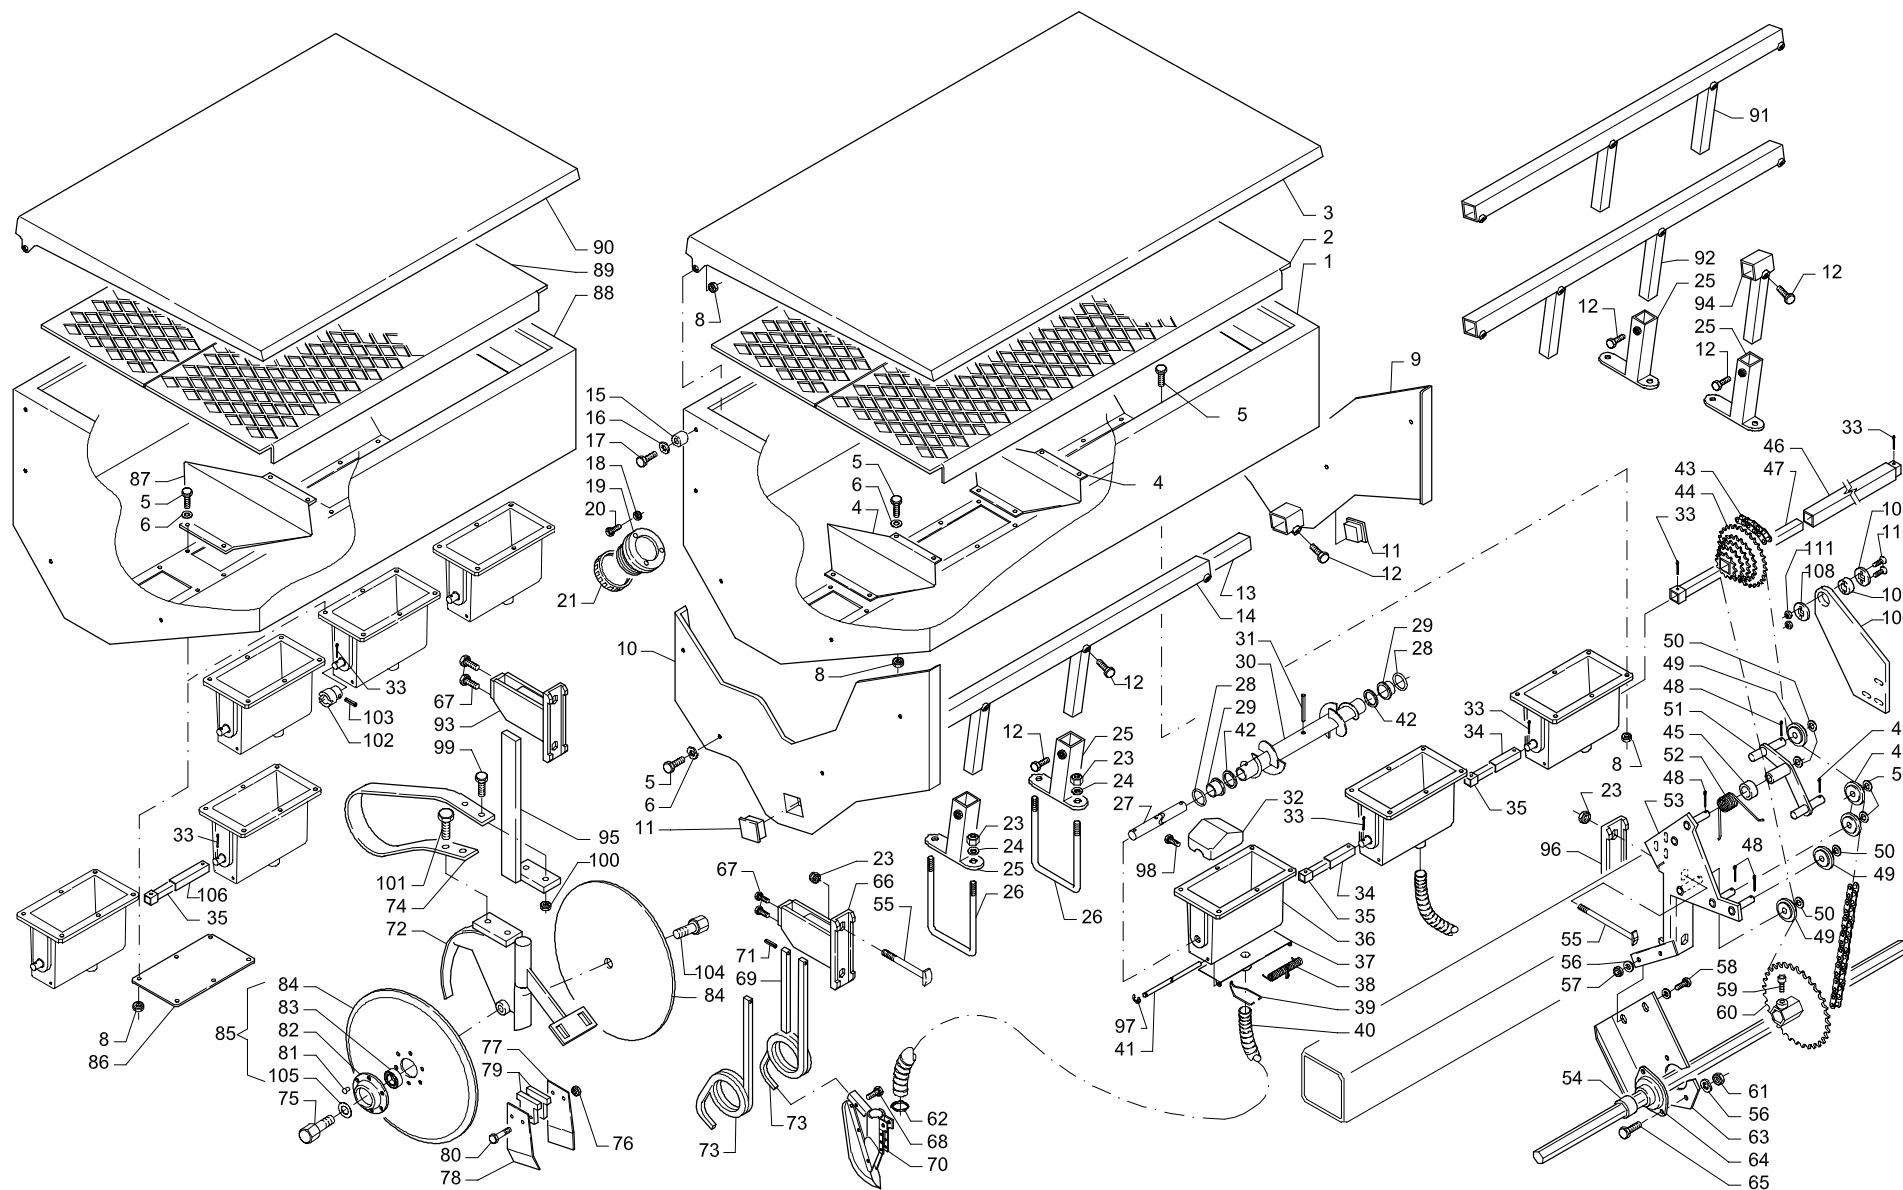

283.007/01

10 FERTILISER


POSITION	CODE	DENOMINATION	POSITION	CODE	DENOMINATION
1	10027050	FERTILISER TANK CAPACITY 1200 lt	42	023.055	FLAT WASHER M16=17 X30X3 6592
2	10027100	SIFTING FOR TANK OF 1200 lt	43	10027474	CHAIN 1/2"X3/16" 129 P.+G.
3	10027090	COVER FERTILISER TANK OF 1200 lt	44	10027404	LOWER PACK PINS
4	10027110	SWITCH	45	10027468	SPACER
5	021.816	SCREW TE M 6X 20 8.8 5739 INOX	46	10027260	OUTER UNTHREAD PIPE CENTER FERTILISER
6	022.706	FLAT WASHER M 6= 6,3X12X1,6 6592 IN	47	10027254	INNER UNTHREAD PIPE CENTER FERTILISER
8	021.406	SELF LOCKING NUT M 6 7473 INOX	48	024.304	ELASTIC PLUG D. 4X20 6873 NE
9	10027070	FERTILISER RIGHT SIDE	49	096925	TIGHTENING CHAIN ROLL
10	10027080	FERTILISER LEFT SIDE	50	023.035	FLAT WASHER M14=15 X28X2,5 6592
11	095.077	PLUG FOR PIPE Q. 40X 40 S.5	51	10027465	TIGHTENER
12	020.151	SCREW TE M12X 25 8.8 5739 ZB	52	10027470	SPRING TIGHTENER
13	10027150	HOPPER PIPE FOR FERTILISER OF 1200 lt	53	10037450	SUPPORT FERTILISER TRANSMISSION
14	10027300	SUPPORT FOR FERTILISER OF 1200 lt	54	10002704	INNER HEGAXON BUSHING
15	10017142	SPACER ZB	55	10011025	SCREW M14 (DACR.320A)
16	022.706	FLAT WASHER M 6= 6,3X12X1,6 6592 IN	56	023.020	FLAT WASHER M 8= 8,4X16X1,6 6592
17	021.816	SCREW TE M 6X 20 8.8 5739 INOX	57	021.102	SELF LOCKING NUT M 8 7474
18	021.100	SELF LOCKING NUT M 5 7474 ZB	58	020.028	SCREW TE M 8X 12 8.8 5739
19	10017138	OUTLET FOR UNLOADING FERTILISER	59	020.050	SCREW TE M 8X 16 8.8 5739
20	021.820	SCREW TE M 5X 20 8.8 5739 INOX	60	10027426	LOWER PACK PINS
21	10017139	PLUG FOR OUTLET	61	021.102	SELF LOCKING NUT M 8 7474 ZB
23	021.105	SELF LOCKING NUT M 14 7474 ZB	62	025.210	BANDS 4,8x200
24	023.035	FLAT WASHER M14=15 X28X2,5 6592 ZB	63	10027472	CARTER TRANSMISSION PROTECTION
25	10027120	FERTILISER SUPPORT	64	051.023	BEARING WITH SUPPORT SBPFD205
26	10000250	U-BOLT M14 ZB	65	020.052	SCREW TE M 8X 25 8.8 5739 ZB
27	10027214	DISTRIBUTOR SHAFT (INOX 304)	66	10017101	STIRRUP FIXING SUFFOLK COULTER
28	046.020	OR 3043 (D=2,62 D=10,78)	67	020.252	SCREW TE M16X 30 8.8 5739
29	052.175	SELF GREASING BUSHING 16X22X28X3,5X22	68	024.425	ELASTIC PLUG D. 8X30 6875 NE
30	10027217	BIG AUGER FERTILISER	69	10017113	BOARD FOR SUFFOLK COULTER SPRING
30	10027216	RED AUGER FERTILISER	70	10017109	HAY CUTTER FERTILISER
31	024.355	ELASTIC PLUG D. 6X55 6873 INOX	71	024.345	ELASTIC PLUG D. 6X40 6873 NE
32	10027230	BODY COVER	72	10037620	DISC HOLDER
33	024.236	SPLIT PIN D. 5 X 32 ZB 1336	73	10017108	SPRING FOR LEFT SUFFOLK COULTER (20X20)
34	10027276	OUTER UNTHREAD TRANSMISSION (1200 lt-800 lt)	73	10017114	SPRING FOR RIGHT SUFFLOK COULTER (20X20)
34	10027280	OUTER UNTHREAD TRANSMISSION (800 lt)	74	10027519	SPRING SUFFOLK COULTER DISC
35	10027270	OUTER UNTHREAD TRANSMISSION (1200 lt)	75	30031206	SCREW FIXING LEFT DISC
36	10027210	FERTILISER DISTRIBUTOR	76	021.115	SELF LOCKING NUT M 6 7473 ZB
37	10027232	DORR EXITE FERTILISER	77	10027672	RIGHT SCRAPER BLADE
38	10027236	DOOR SPRING	78	10027674	LEFT SCRAPER BALDE
39	10027286	FAN SPRING	79	10027670	FIXING PLATE SCRAPERS BLADES
40	030530	SPIRAL PIPE Ø 35	80	021.815	SCREW TE M 6X 25 8.8 5739 INOX
41	10027234	DOOR SHAFT	81	023.837	RIVET FE TT D.6X10 UNI 748

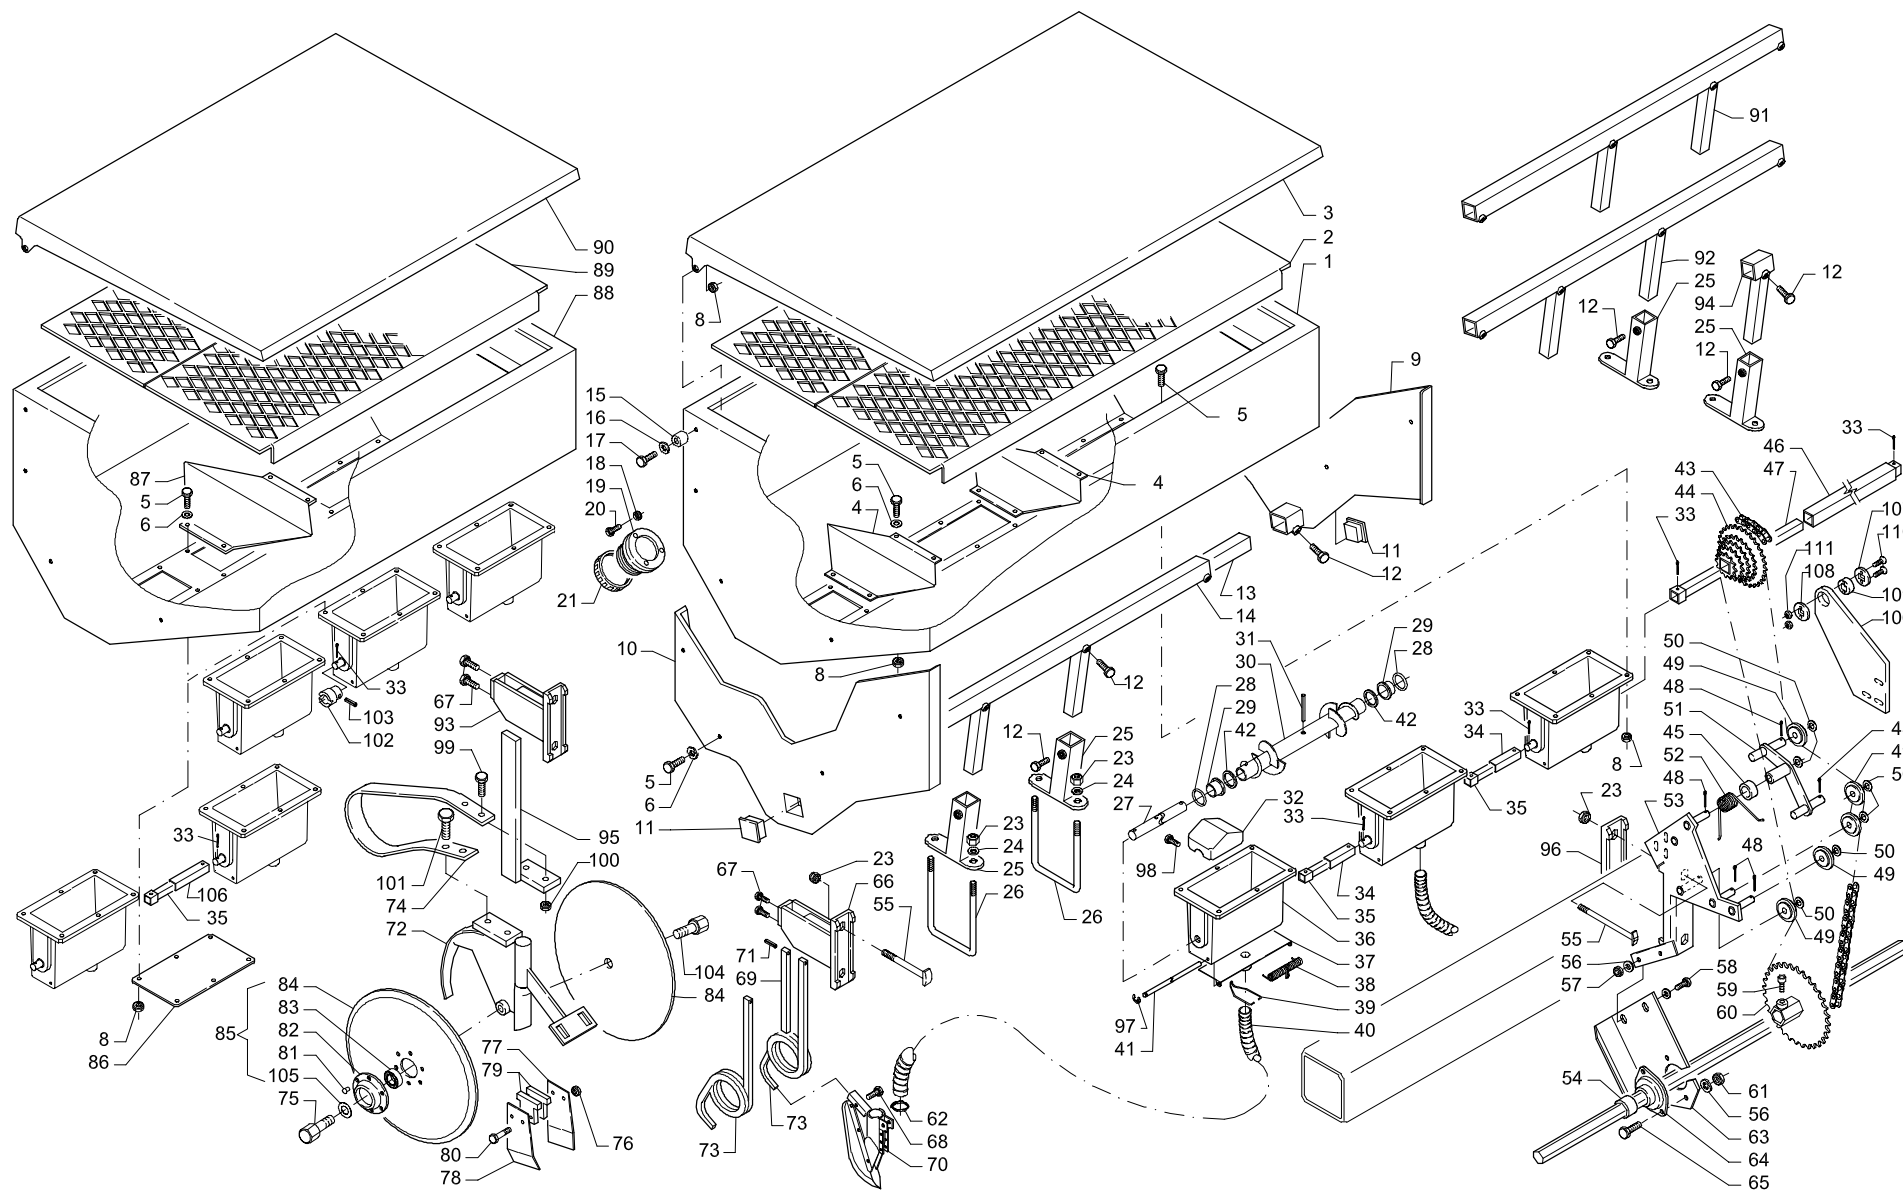

283.007/01

10 FERTILISER


POSITION	CODE	DENOMINATION
82	30001204	DISC HUB
83	050.105	BEARING 3204 A-2RS1
84	10037604	SUFFOLK DISC COULTER D.354-S.3 (27.8)
85	10037660	SUFFOLK DISC COULTER
86	10027024	INTERMEDIARY EXITE CLOSING
87	10027022	TRANSFORMATION 3-2 OUTLET
88	10027002	FERTILISER TANK OF 800 lt
89	10027026	SIFTING FOR FERTILISER 800 lt
90	10027016	COVER FERTILISER OF 800 lt
91	10027324	SUPPORT LEFT FERTILISER OF 800 lt
92	10027320	SUPPORT RIGHT FERTILISER OF 800 lt
93	10027650	SUPPORT SUFFOLK COULTER
94	10027140	TEELSCOPIC SUPPORT FERTILISER
95	10027640	LINKAGE SUFFOLK DISCS COULTER
96	020.152	SCREW TE M12X 30 8.8 5739
97	028.097	SEEGER RING E D. 8 7435/471
98	020.033	SCREW TE M 6X 10 8.8 5739 INOX
99	020.138	SCREW TE M10X 45 8.8 5739 ZB
100	021.112	SELF LOCKING NUT M 10 7473 ZB
101	020.200	SCREW TE M14X 30 8.8 5739 ZB
102	10027278	BUSHING LINKAGE BODY ZB
103	024.335	ELASTIC PLUG D. 6X35 6873 INOX
104	30011468	SCREW FIXING RIGHT DISC ZB
105	050.500	RING NILOS TYPE JV6204
106	10037414	TRANSMISSION SUPPORT
107	10032468	RIGHT DISC
108	10037470	LEFT DISC
109	10037466	BUSHING
110	020.660	SCREW TSPEI M4X25
111		NUT M4

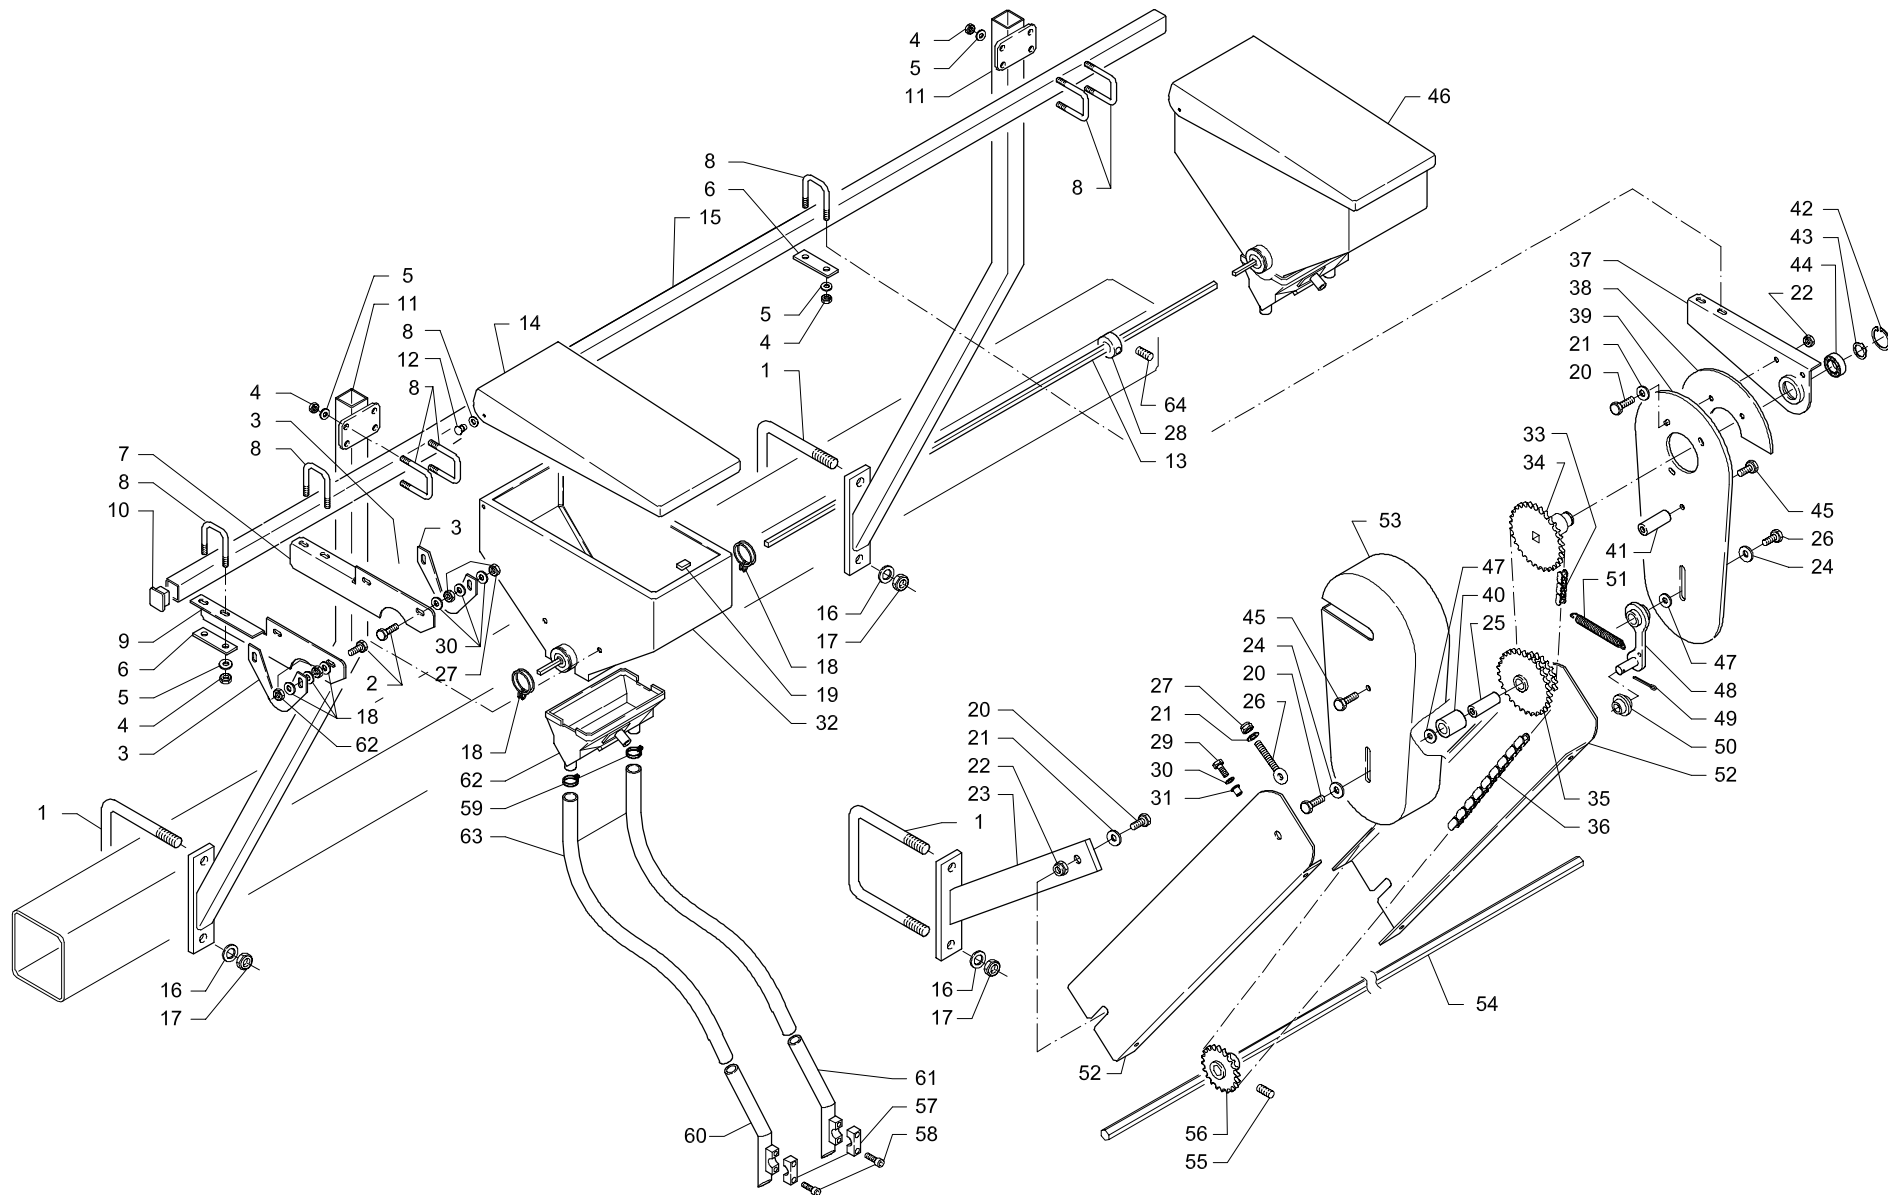

283.007/01

11 MICROGRANULATOR

POSITION	CODE	DENOMINATION	POSITION	CODE	DENOMINATION
1	10000250	U-BOLT M14 ZB	30	023.010	FLAT WASHER M 6= 6,3X12X1,6 6592
2	020.052	SCREW TE M 8X 25 8.8 5739	31	023.860	RIVET FIL. M 6 FTT-C ACCIAIO
3	10018524	SUPPORT MICROGRANULATOR	32	10018451	TANK MICROGRANULATOR INOX 12DCM
4	021.027	NUT E 6S M 10	33	10028228	CHAIN 1/2"X 5/16" 69 MAGLIE + GIUNTO
5	023.030	FLAT WASHER M10=10,5X20X2	34	10018245	UPPER PINION
6	10008260	PLATE	35	10028218	CROWNS RIN. 1/2"X5/16" Z=20 Z=30 I.75
7	10018520	STIRRUP RIGHT LINKAGE FOR MICROGRANULATOR TANK	35	10028217	CROWNS RINV.1/2"-5/16" Z=12 Z=30 I.45
8	10007461	U-BOLT M10 ZB	36	10028216	CHAIN 1/2"X5/16" 179 LINKS + JOINT
9	10018521	STIRRUP RIGHT LINKAGE FOR LEFT MICROGRANULATOR TANK	37	10008241	SUPPORT UPPER TRANSMISSION
10	096.140	PLUG FOR PIPE 40X40	38	10028231	CHAIN PROTECTION
11	30008510	LINKAGE MICROGRANULATOR	39	10028237	SHEET SUPPORT RELEASE MICROGRANULATOR
12	029.001	ALLUMINIUM RIVET D 4X9	40	10001009	BUSHING
13	10018544	BAR 10X10 L=1200	41	10028222	CARTER SUPPORT
13	10018546	BAR 10X10 L=1650	42	028.010	SEEGER RING I D. 55 7437/472
13	10018548	BAR 10X10 L=1800	43	028.112	SEEGER RING E D. 35 7435/471
13	10018550	BAR 10X10 L=2100	44	050.102	BEARING 61907-2RS1
13	10018552	BAR 10X10 L=2550	45	020.009	SCREW TE M 6X 12 8.8 5739
13	10018554	BAR 10X10 L=3000	46	10018450	MICROGRANULATOR MICROVOLUMEX INOX 12DMC
13	10018556	BAR 10X10 L=3300	46	10018460	MICROGRANULATOR MICROVOLUMEX INOX 27L
13	10018558	BAR 10X10 L=4800	47	023.070	FLAT WASHER M18=19 X34X3 6592
14	10018452	COVER TANK MICROGRANULATOR 12DCM	48	10028233	TIGHTENER MICROGRANULATOR CHAIN
15	10008530	SUPPORT PIPE MICROGRANULATOR L=2400	49	024.209	SPLIT PIN D. 2,5X 25 ZB 1336
15	10008532	SUPPORT PIPE MICROGRANULATOR L=1600	50	096925	ROLL TIGHTENING CHAIN
15	10008534	SUPPORT PIPE MICROGRANULATOR L=3000	51	056.100	TRACTION SPRING (2X15X75)
15	10008535	SUPPORT PIPE MICROGRANULATOR L=3100	52	10028220	CARTER LOWER CHAIN MICROGRANULATOR
15	10008540	SUPPORT PIPE MICROGRANULATOR L=3800	53	10028230	CARTER RELEASE MICROGRANULATOR
15	10008545	SUPPORT PIPE MICROGRANULATOR L=5400	54	10002318	HEXAGON TRANSMISSION 1800 ZB
16	023.035	FLAT WASHER M14=15 X28X2,5 6592	54	10002320	HEXAGON TRANSMISSION 2000 ZB
17	021.120	SELF LOCKING NUT M 14 7473	54	10002325	HEXAGON TRANSMISSION 2500 ZB
18		BIG BAND	54	10002331	HEXAGON TRANSMISSION 3190 ZB
19		SPRING CLOSING MICROGRANULATOR	54	10002332	HEXAGON TRANSMISSION 3250 ZB
20	020.051	SCREW TE M 8X 20 8.8 5739	54	10002335	HEXAGON TRANSMISSION 3500 ZB
21	023.020	FLAT WASHER M 8= 8,4X16X1,6 6592	54	10002340	HEXAGON TRANSMISSION 4000 ZB
22	021.102	SELF LOCKING NUT M 8 7474 ZB	54	10002342	HEXAGON TRANSMISSION 4200 ZB
23	10028238	SUPPORT CARTER	54	10002355	HEXAGON TRANSMISSION 5500 ZB
24	023.019	FLAT WASHER M 8= 9 X32X2,5 6593	55	026.107	GRAIN CE 12.9 M 8X12 5923
25	10028227	SUPPORT SHAFT CROWNS	56	10017250	LOWER PINION ZB Z=12 1/2X5/16
26	022.130	TIE-ROD AT EYE M 8 L= 60 6058	57	10008496	UPPER LOCK
27	021.003	NUT E 6S M 8 5588	58	020.971	SCREW TCI M 6X 20 4.8 6107
28	10018536	METAL RING LOCK BARS D.25X14X10	59	025.001	BAND
29	020.011	SCREW TE M 6X 16 8.8 5739	60	10008493	LEFT PIPE

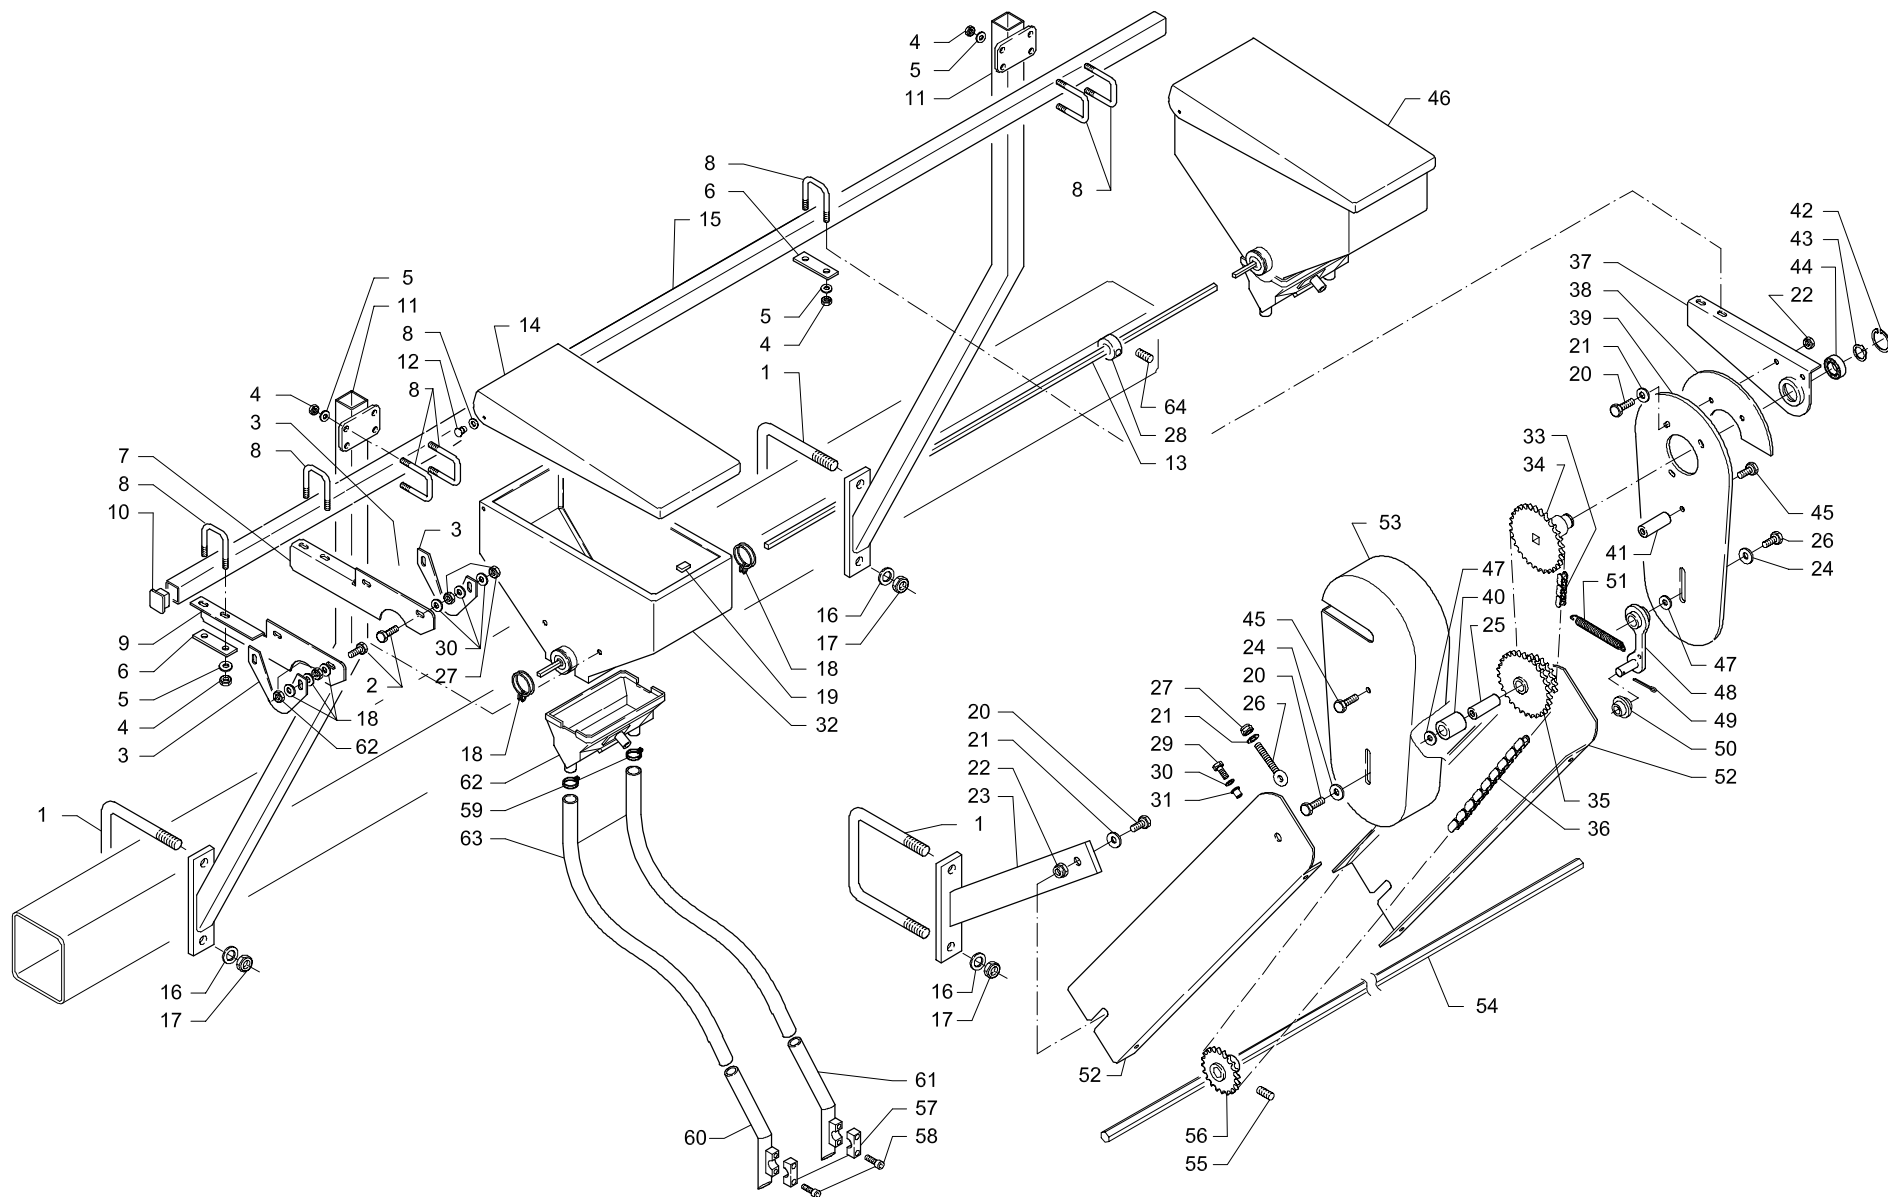

283.007/01

11 MICROGRANULATOR

POSITION	CODE	DENOMINATION
----------	------	--------------

61	10008492	CRIGHT PIPE
62	10018453	DISTRIBUTOR MICROGRANULATOR MICROVOLUMEX
63	10028300	PIPE OUTLET MICROGRANULATOR
64	026.092	GRAIN CE 12.9 M 6X10 5927



MASCAR S.p.A.

Via Roma, 82 – 36040 Grumolo delle Abbadesse (Vicenza) Italy

Tel. 044.380180 (r.a.) – Fax 0444.583831 - 380185